


# THIS IS THE F-28A

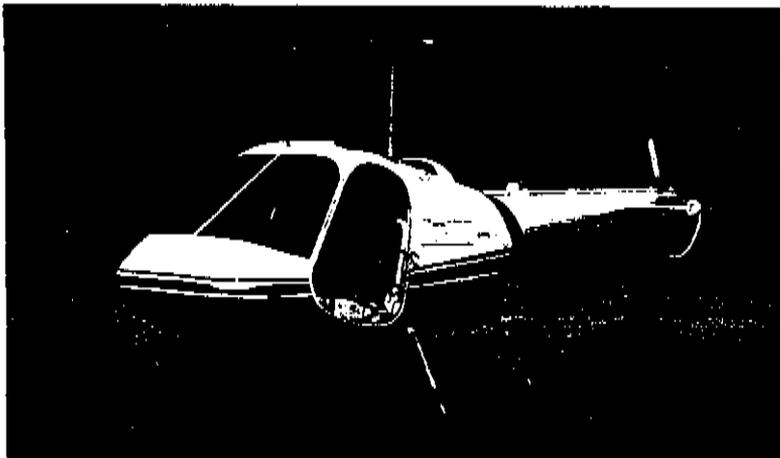

Manufactured by The Enstrom Corporation, Menominee, Michigan

Ownership of the F-28A Helicopter will provide you with a smooth, distinctive, and comfortable mode of flight geared to the concept of modern transportation. For business or pleasure, the field of operations is practically unlimited, as point-to-point travel can be accomplished from either prepared or unprepared areas. The distinctive appearance of the F-28A is symbolic of prestige and its high performance capabilities. Under the graceful lines of the F-28A is a ruggedly constructed helicopter designed for easy servicing, minimum maintenance, dependability and economical operation.

Copyright 1972 Enstrom Corporation, Menominee, Michigan, U.S.A.



## TABLE OF CONTENTS

## F-28A DESCRIPTION

Interior Arrangement .....	FM-0-1
Air Induction System .....	FM-0-1
Power Plant.....	FM-0-1
Oil System.....	FM-0-1
Oil System Indicators – Oil Temperature and Pressure Gauges...	FM-0-1
Engine Controls .....	FM-0-1
Throttle.....	FM-0-1
Mixture Controls.....	FM-0-2
Magneto Switch .....	FM-0-2
Starter Button.....	FM-0-2
Master Switch .....	FM-0-2
Cabin Heat.....	FM-0-2
Clutch Engaging Lever.....	FM-0-2
Fuel System .....	FM-0-2
Auxiliary Fuel Pump Switch .....	FM-0-2
Fuel Quantity Indicator.....	FM-0-2
Fuel Pressure Indicator.....	FM-0-3
Transmission System.....	FM-0-3
Main Rotor Transmission Temperature Indicator.....	FM-0-3
Tail Rotor Transmission .....	FM-0-3
Rotor System .....	FM-0-3
Main Rotor .....	FM-0-3
Tail Rotor .....	FM-0-3
Rotor Tachometer.....	FM-0-3
Flight Controls.....	FM-0-3
Cyclic Control.....	FM-0-3
Stabilizer .....	FM-0-4
Collective Pitch Control.....	FM-0-4
Directional Control Pedals .....	FM-0-4
Flight Instruments .....	FM-0-4
Airspeed Indicator.....	FM-0-4
Altimeter.....	FM-0-4
Compass.....	FM-0-4
Free Air Temperature Indicator.....	FM-0-4
Electrical System .....	FM-0-4
Direct Current Power System .....	FM-0-4
Instrument Panel Illustration .....	FM-0-5
Electrical Power Panel.....	FM-0-6
Lighting Equipment .....	FM-0-6
Position Lights .....	FM-0-6
Anti-Collision Lights .....	FM-0-6
Landing Light .....	FM-0-6
Ground Handling Wheels.....	FM-0-6
Baggage Compartment.....	FM-0-6
Interior View of Cabin.....	FM-0-7
Specifications of F-28A .....	FM-0-8

Preflight Inspection .....	FM-0-10
Fuel Management .....	FM-0-10
Exterior Preflight Inspection of F-28A .....	FM-0-10
Interior Preflight Inspection .....	FM-0-12
Preflight Inspection Illustration .....	FM-0-12

## SECTION 1 – GENERAL

FAA Approval .....	FM-1-1
F-28A Log of Pages and Revisions .....	FM-1-2
EASA Log of Revisions .....	FM-1-2.3
F-28A Log of Supplements .....	FM-1-3
EASA Log of Supplements .....	FM-1-3.1

## SECTION 2 – OPERATING LIMITATIONS – FAA APPROVED

Power Plant Limitations .....	FM-2-1
Rotor – Flight Limitations – Power Off .....	FM-2-1
Instrument Markings .....	FM-2-1
Airspeed Limitations .....	FM-2-2
Altitude Limitations .....	FM-2-2
Weight Limitations .....	FM-2-2
Center of Gravity Limitations .....	FM-2-2
Type of Operation .....	FM-2-2
Placards .....	FM-2-3

## SECTION 3 – NORMAL PROCEDURES – FAA APPROVED

F-28A Normal Engine Starting Procedures .....	FM-3-1
F-28A Engine Starting Procedures, Hot Condition .....	FM-3-1
F-28A Rotor Engagement .....	FM-3-2
F-28A Engine Warm-up and Ground Check .....	FM-3-2
F-28A Engine Cooling and Shut Down Procedure .....	FM-3-3
Flight Information .....	FM-3-3
Throttle Correlation Device .....	FM-3-4

## SECTION 4 – EMERGENCY PROCEDURES – FAA APPROVED

Engine Failure .....	FM-4-1
Lighting Failure .....	FM-4-1
Fire .....	FM-4-1
Fire on Ground .....	FM-4-1
Fire in Flight .....	FM-4-1
Tail Rotor (Anti-Torque) System Failure .....	FM-4-2
Tail Rotor Drive System Failure .....	FM-4-2
Tail Rotor Control System Failure .....	FM-4-3
Pitch Link Failure .....	FM-4-3
Failure of Left Pedal Controls .....	FM-4-3
Failure of Right Pedal Controls .....	FM-4-3
Landing in Water (Ditching) .....	FM-4-4
Ditching With Power .....	FM-4-4
Ditching Without Power .....	FM-4-4
Alternator Failure .....	FM-4-4

Main Rotor Gearbox.....	FM-4-5
Abnormal Vibrations.....	FM-4-5
Lamiflex Bearing Failure .....	FM-4-6

## SECTION 5 – PERFORMANCE DATA – FAA APPROVED

Best Rate of Climb Speed.....	FM-5-1
Minimum Rate of Descent Speed .....	FM-5-1
VNE vs Density Altitude Chart, Figure 1 .....	FM-5-1
Model F-28A Airspeed Calibration, Figure 2 .....	FM-5-2
Hover Ceiling in Ground Effect, Figure 3 .....	FM-5-3
Height – Velocity Diagram (Operation at Sea Level) – Figure 4a .....	FM-5-4
Height – Velocity Diagram (Operation at 7,000 ft.) – Figure 4b .....	FM-5-5
Density Altitude Chart, Figure 5 .....	FM-5-6
Rate of Climb vs Density Altitude Chart, Figure 6 .....	FM-5-7

## SECTION 6 – F-28A SUPPLEMENTS – FAA APPROVED

No. 1 External Loads .....	FM-6-1
No. 2 Float Landing Gear.....	FM-6-3
No. 3 External Litter .....	FM-6-9
No. 4 External Mounting of Auxiliary Fuel Tank .....	FM-6-10

## SECTION 7 – WEIGHT AND BALANCE

Information .....	FM-7-1
Weight & Balance .....	FM-7-1
Tools & Equipment.....	FM-7-1
Detailed Procedure for Weighing F-28A Series Helicopter .....	FM-7-1
Loading Information .....	FM-7-5
Weight & Balance Report.....	F-166
Aircraft Actual Weight Report.....	F-167
Aircraft Weight & C.G. Calculation .....	F-168
F-28A Equipment List .....	F-157
Basic Weight & Balance Record .....	F-165

## SECTION 8 – OPERATIONAL INSTRUCTIONS

Introduction .....	FM-8-1
Taxiing .....	FM-8-1
Takeoff – Type of Takeoff .....	FM-8-1
Normal Takeoff to Hover .....	FM-8-1
Normal Takeoff from Hover.....	FM-8-1
Maximum Power Takeoff .....	FM-8-2
Maximum Power Takeoff from Confined Areas.....	FM-8-2
Crosswind Takeoff .....	FM-8-2
Normal Approach for Landing .....	FM-8-3
Steep Approach .....	FM-8-3
Landing – Landing Site Evaluation.....	FM-8-3
Wind Direction and Velocity .....	FM-8-4

Normal Landing .....	FM-8-4
Crosswind Landing .....	FM-8-4
Flight Characteristics – Handling and Stability.....	FM-8-5
Maneuvering Flight .....	FM-8-5
Hovering Flight .....	FM-8-5
Level Flight Characteristics.....	FM-8-6
Student Training .....	FM-8-6
Blade Tape .....	FM-8-6
Loss of Tail Rotor Effectiveness .....	FM-8-6

## SECTION 9 – DAY-TO-DAY CARE

Day to Day Care of Your F-28A.....	FM-9-1
Ground Handling .....	FM-9-1
Mooring Your F-28A .....	FM-9-1
Transporting Your F-28A .....	FM-9-1
Storage.....	FM-9-1
Hoisting .....	FM-9-1
Jacking .....	FM-9-2
Exterior Paint .....	FM-9-2
Windows and Doors .....	FM-9-2
Upholstery and Carpets.....	FM-9-2
Landing Gear Shock Struts .....	FM-9-2
Air Cleaner or Filter .....	FM-9-2
Lights.....	FM-9-2
Battery .....	FM-9-3
Dampers – Main Rotor .....	FM-9-3
Transmission – Main .....	FM-9-3
Transmission – Tail Rotor.....	FM-9-3
Lubrication.....	FM-9-3
Excessive Grease.....	FM-9-3
Main Rotor and Tail Rotor Blades.....	FM-9-3
Fuel .....	FM-9-4
Oil .....	FM-9-4
Cooling System .....	FM-9-4
Required FAA Forms.....	FM-9-4

## F-28A DESCRIPTION

One of the first steps in obtaining the utmost performance, service, and flying enjoyment from your F-28A is to familiarize yourself with its equipment, systems, and controls.

The Enstrom F-28A Helicopter is designed for high performance, mechanical simplicity, and maximum versatility. By virtue of component longevity and minimum maintenance requirements, the F-28A enjoys the lowest operating cost of any helicopter. The rugged, patented rotor head, combined with the (51 lbs each) rotor blades, gives unheard-of stability and excellent autorotational characteristics.

## INTERIOR ARRANGEMENT

The cabin interior is a full, three-place, side-by-side seating arrangement with a spacious 61" width for maximum pilot and passenger comfort and safety. The instrument panel is on the horizontal plane for more natural scanning and is conveniently located for dual pilot viewing. Excellent visibility is offered through the tinted plexiglas wrap-around windshield and doors with overhead and lower deck windows. Extra-width, swing-open doors close securely with simple-to-operate safety lock handles. The helicopter can be flown with either left, right, or both doors off.

## AIR INDUCTION SYSTEM

The air induction system consists of a filtered non-ram air intake located within the engine compartment. It incorporates a spring-loaded, automatic alternate air source.

## POWER PLANT

A Lycoming H10-360-C1A or H10-360-C1B 205 HP four cylinder opposed engine is used in the F-28A Helicopter. The engine is delivered with platinum spark plugs.

NOTE: It is recommended that the appropriate Lycoming Operator's Manual be consulted prior to any adjustment or repair to the engine.

## OIL SYSTEM

The Lycoming engine employs a wet sump lubrication system. It has a capacity of 8 quarts. A bayonet-type oil quantity gauge with graduated markings is part of the oil tank filler cap and is accessible through the left-hand side cowling of the engine. Engine oil cooling is accomplished by an oil cooler with thermostatic valves and by-pass provisions. It is located on the right-hand side of the engine compartment.

OIL SYSTEM INDICATORS - OIL TEMPERATURE AND PRESSURE GAUGES. Standard type gauges are provided for both the engine oil temperature and oil pressure indications. Both gauges are marked to provide visual engine operating limitations and are located on the instrument panel.

## ENGINE CONTROLS

THROTTLE. A twist-grip type throttle is located on the collective pitch control stick for direct control of engine

power. It is manually connected to the fuel servo-throttle valve on the engine.

**MIXTURE CONTROL.** A mixture control push-pull control knob is provided on the center of the console. It is pushed in during all flight operations. Shutting off the engine is accomplished by placing the mixture control in the IDLE CUT OFF position.

**MAGNETO SWITCH.** The magneto switch is a key-operated switch located in the center of the instrument panel. For starting, place the switch in the BOTH position.

**STARTER BUTTON.** The starter button is located on the end of the collective control. Push to engage.

**MASTER SWITCH.** The master switch is located on the instrument panel next to the master switch circuit breaker. It is a single-throw, two-position switch.

#### CABIN HEAT

The cabin heat control is located at the left-hand side of the pilot's seat, on the floor. By moving the control in or out, the operator regulates the amount of cabin heat through the output louvers located in the center of the floor under the instrument panel.

#### CLUTCH ENGAGING LEVER

The clutch engagement lever is located at the right side of the pilot's seat on the forward face of the seat structure. The clutch lever is provided as a means of engaging and disengaging the rotor drive system. The rotor drive system is engaged by pulling the clutch lever upward and rearward until the lever hits the stop and the warning light goes out. The handle can then be stowed by lifting it straight up and pivoting it down to the floor. When it is in the stowed position, the handle should lie flat on the floor. If it does not lie flat on the floor in the stowed position, the clutch rigging should be checked as described in Section 8 of the Maintenance Manual. The clutch lever must be stowed whenever the rotor drive system is engaged.

#### FUEL SYSTEM

The system consists of two interconnected fuel tanks, which feed simultaneously to the engine. They are located on the left and right side of the aircraft over the engine compartments. The tanks have an individual fuel capacity of 15 gallons each. Each fuel tank is gravity fed to a central distributing line which connects to the electric boost pump and engine driven pump. The fuel control valve is an off-on type and is located on the firewall next to the pilot's left shoulder. Each tank has an individual drain valve in the bottom. There is also a main gasolator filter located aft of the firewall in the engine compartment and extends beyond the side panel.

**AUXILIARY FUEL PUMP SWITCH.** The fuel boost pump switch and fuel pressure warning lights are located on the instrument panel.

**FUEL QUANTITY INDICATOR.** The fuel quantity gauge continuously indicates the total quantity of fuel. It is hooked up through a simple

type liquidometer float located in the right-hand fuel tank.

**Fuel Pressure Indicator.** The fuel pressure indicator provides PSI pressure readings of the fuel as delivered to the flow divider. The indicator is marked for normal operating range from 0 - 12 PSI.

### TRANSMISSION SYSTEM

The main transmission unit provides an 8.7871 reduction ratio between the engine and the main rotor. The transmission incorporates a free-wheeling unit in the upper pulley assembly, which is mounted on the output pinion shaft. The free-wheeling unit provides a disconnect from the engine in the event of a power failure and permits the main and tail rotors to rotate in order to accomplish safe autorotation landings. Six pints of No. 90 wt. oil are used in the transmission. The main rotor transmission has a sight gauge which is located on the aft right-hand side and is visible through an opening in the baggage compartment.

**Main Rotor Transmission Temperature Indicator.** A main rotor transmission gauge is located on the instrument panel and is redlined at 220° F.

**Tail Rotor Transmission.** The tail rotor transmission, mounted at the aft end of the tail cone, supports and drives the tail rotor. The tail rotor transmission is equipped with a self-contained lubricant supply and level gauge at the rear of the housing and a magnetic plug can be removed to inspect for metal particles. Its capacity is ½ pint of No. 10 oil.

### ROTOR SYSTEM

**Main Rotor.** The main rotor is a three-blade, fully articulated system. The fully articulated system in the F-28A Helicopter provides smooth control responses in all modes of flight; and due to the kinetic energy stored in the heavy rotor blades, allows for easy-to-perform, safe autorotation landings in the event of power failure. The rotor assembly consists of three all-metal bonded blades, upper and lower rotor hub plates, universal blocks, blade grip assemblies, and lead lag hydraulic dampers.

**Tail Rotor.** The tail anti-torque rotor counteracts the torque of the main rotor and functions to maintain or change the helicopter heading. The tail rotor is a two-bladed, teetering, delta-hinge type assembly.

**Rotor Tachometer.** The rotor RPM indicator is part of a dual-purpose tachometer which also reads engine RPM.

### FLIGHT CONTROLS

**Cyclic Control.** The Cyclic control stick is similar in appearance to the control stick of a fixed-wing aircraft. The direction of stick movement results in a change of the plane of rotation of the main rotor and will produce a corresponding directional movement of the helicopter through the longitudinal and lateral modes of flight. The stick grip

incorporates a trigger-type switch used for radio transmissions. A trim switch is also located on the cyclic stick grip to control the longitudinal and lateral trim motion.

**Stabilizer.** An all-metal, fixed-position stabilizer adjusted to a  $-4^{\circ}$  is installed on the tail cone assembly for longitudinal trim.

**Collective Pitch Control.** The collective pitch control lever is located to the left of the pilot's position and controls the vertical mode of flight. A rotating, grip-type throttle is located at the end of the collective control.

**Directional Control Pedals.** The directional control pedals are located in the cabin forward of the pilot and/or co-pilot. When moved, these adjustable pedals change the pitch of the tail rotor blades and thereby provide the method of changing directional heading.

## FLIGHT INSTRUMENTS

The standard flight instruments which are installed in the F-28A as basic equipment comply with the requirements under visual flight rules for day or night operation. The panel arrangement provides ease of visual observance and includes space provisions for installation of additional instruments to meet individual requirements.

**Airspeed Indicator.** The single-scale airspeed indicator is calibrated in MPH and provides an indicated airspeed reading at any time during forward flight. The pitot tube, which provides air pressure source, is located below the cabin nose section. Static air pressure for instrument operation is derived from two static vents located on either side of the tail cone assembly. The openings in the pitot tube and static vent ports must be maintained obstruction-free and clean at all times for proper instrument operation.


**Altimeter.** The altimeter is a sensitive type that provides distance-height readings from 0 to 25,000 feet. The long hand in a single complete sweep of the dial totals 1,000 feet, and the short hand totals the thousands of feet altitude. The instrument is vented to the same static port vents as the airspeed indicator.

**Compass.** A standard aircraft quality magnetic compass is mounted on the front of the cockpit within easy sight of pilot or co-pilot. It is to be used in conjunction with a compass correction card located adjacent to the instrument.

**Free Air Temperature Indicator.** The free air temperature indicator is a direct reading, bi-metallic instrument with a stainless steel probe. This instrument provides ambient temperature information which, when utilized, will assist in determining performance capabilities of the helicopter at the existing climatic condition. The indicator is located in the top of the canopy.

## ELECTRICAL POWER SUPPLY SYSTEM

**Direct Current Power System.** The basic power supply system is a

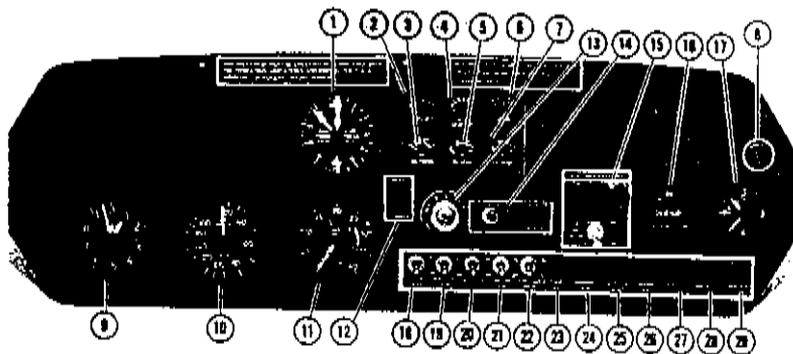

## KEY TO INSTRUMENT PANEL

1	Manifold pressure/fuel pressure	16	Engine hour meter
2	Fuel quantity	17	Clock
3	Oil pressure	18	Panel light
4	Main rotor gear box	19	Running lights
5	Oil temperature	20	Anti-collision light
6	Ammeter	21	Landing light
7	Cylinder temperature	22	Alternator switch
8	Radio circuit breaker	23	Panel light circuit breaker
9	Altimeter	24	Running light circuit breaker
10	Airspeed	25	Anti-collision light circuit breaker
11	Rotor/engine tachometer	26	Landing light circuit breaker
12	Panel light dimmer switch	27	Ignition circuit breaker
13	Ignition switch	28	Instrument CL circuit breaker
14	Master switch and circuit breaker	29	Trim motor circuit breaker
15	Fuel pressure indicator and boost pump switch		

12-volt direct current system, with a negative ground to the helicopter structure. A belt-driven alternator is located on the aft part of the engine and is used in place of a generator. One 12-volt battery is located in the right-hand side of the pilot's compartment and serves as a stand-by power source supplying power to the system when the alternator is inoperative.

**Electrical Power Panel.** The following switches and circuit-breakers are located on the right-hand side of the instrument console within easy reach of pilot or co-pilot: landing light, navigation light, position light, alternator, instrument light, and master switch.

### LIGHTING EQUIPMENT

The basic helicopter is equipped with the required lights necessary for VFR night operation plus additional lighting equipment for utility and convenience purposes. The electrical panel on the right-hand side of the instrument console contains the protective circuit breakers and control panels for the lighting equipment.

**Position Lights.** Two position lights are located one on either side of the forward cabin structure and two lights are located aft of the stabilizer on the tail cone.

**Anti-Collision Lights.** The anti-collision lights have a rotating, flashing action that provides for adequate identification of the helicopter. One anti-collision light is located on top of the fuselage aft of the cabin, and the other light is located forward of the cabin structure under the pilot's compartment. They are operated by the anti-collision switch located on the panel.



**Landing Light.** The landing light is of the permanent extend type and is mounted on the underside of the cabin structure and set in the desired angle for the best forward illumination. The switch for operation of the landing light is located on the instrument panel in the electrical console section.

### GROUND HANDLING WHEELS

Each landing gear skid tube has a manually operated over-centering device to lift the skids for installation of the wheels or retracting them for flight. The ground handling wheels should be retracted and the helicopter allowed to rest on the skids when engine run-up is being performed or when helicopter is parked.

### BAGGAGE COMPARTMENT

The compartment for storage of baggage is provided in the tail cone assembly aft of the engine compartment. Access to the area is through a single door located on the right-hand side and has a lock for external locking. The capacity of the compartment is approximately 10 cu. ft. and has an allowable loading capacity of 60 lbs.

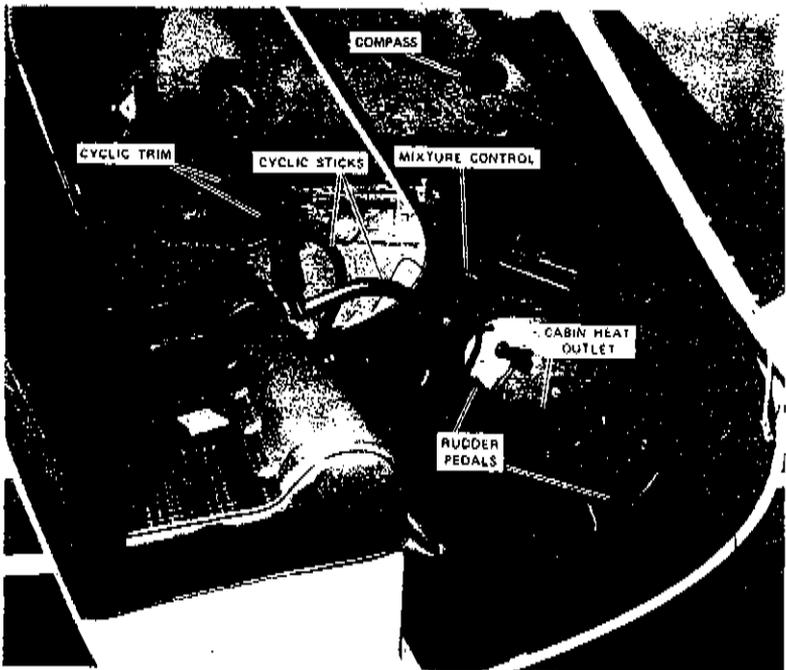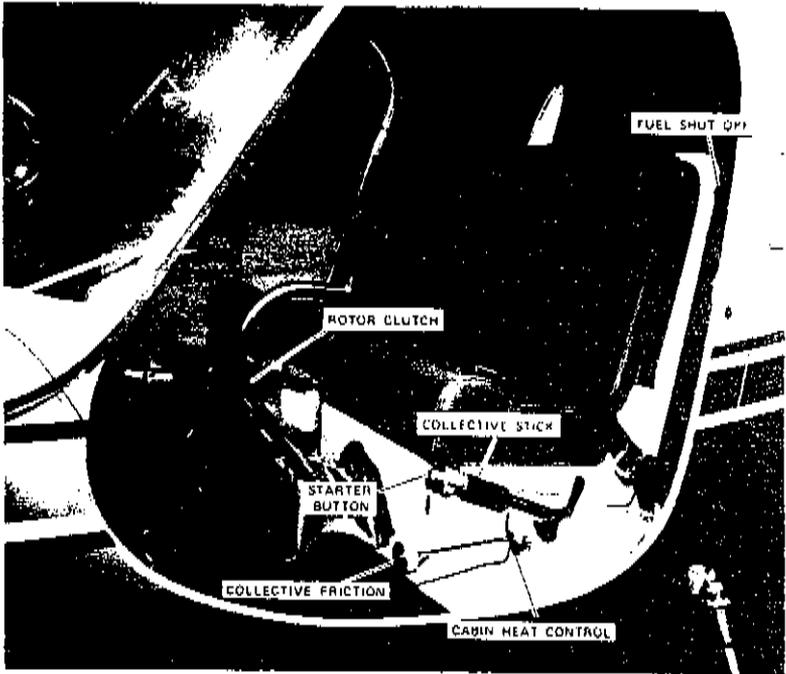

**F-28A SPECIFICATIONS****Power Plant**

Type	Lycoming Opposed
Designation	H10-360-C1A
Cylinders	4
Normal power	205 HP
Normal RPM	2900 RPM
Specific fuel consumption	.5 lbs. hp/hr.
Weight	322 lbs.
Oil	8 qts. @ 15 lbs.

**Performance**

Maximum speed	112V <sub>ne</sub>
Best rate of climb	58 m. p. h. - I.A.S.
Normal fuel capacity	30 U.S. gal. @ 176 lbs.
Rate of climb at sea level	950 FPM
Hovering ceiling - IGE ft.	5600

**Operating RPM's**

Engine	2900
Tail Rotor	2365
Main Rotor	330
Main Rotor Autorotation Range	313 - 385

**Ratios**

Lower to upper pulley	1:1:226
Main Rotor Gear Box	1:7:154
Tail Rotor Gear Box	1:1
Engine to main rotor	8.7871

**Dimensions**

Width (overall)	28' 2"
Rotor diameter	32'
Height (overall)	9'
Length (overall)	29' 4"
Cabin width at seat	61"
Tread - Landing Gear	7' 4"

**Rotor System**

Number of blades, main rotor	3
Chord - main rotor blade	9.5"
Disk area, main rotor	804 sq. ft.
Main rotor RPM	330
Tail rotor diameter	4.67'
Number of blades, tail rotor	2
Chord, tail rotor blade	3.375"

**Weight**

Designed gross weight	2150 lbs.
Empty weight	1450 lbs.
Useful load	700 lbs.
C. G. travel	6"

## PREFLIGHT INSPECTION

After familiarizing yourself with the equipment of your F-28A, the primary concern will be its operation.

This checklist is designed to be used as a reference guide while performing the preflight inspection. Detailed information is found in the Handbook of Maintenance Instructions. Thoroughly familiarize yourself with this Manual before utilizing this checklist. Prior to starting the complete preflight inspection, check the following items in the cockpit: battery switch OFF, magneto switch OFF, all other switches OFF, fuel valve ON.

### Fuel Management

1. Left fuel tank drain – Drain sample into jar. Verify the fuel grade, check the cleanliness, and check that fuel is free of water.

**WARNING: Sample the left and right fuel tank sumps before checking the fuel filter.**

**NOTE: Aircraft should be level or slightly nose down. Rock the aircraft by moving the tail up and down to displace any water or contaminants to the tank sumps. If water is found, rock the aircraft and re-sample. Check the other tank. Repeat until no water is found. Then check the fuel filter.**

2. Right fuel tank drain – Drain sample into jar. Verify the fuel grade, check the cleanliness, and check that fuel is free of water.
3. Fuel filter – Secure and drain fuel sample into jar. Verify the fuel grade, check the cleanliness, and check that fuel is free of water.

### F-28A Exterior

**CAUTION: Remove all covers and locking devices.**

1. Check left hand door for security.
2. Check windshield for cracks.
3. Check pitot tube for obstructions.
4. Check landing lights, beacon and navigational lights for operation and security.
5. Check induction intake scoop for obstructions.
6. Check right hand shock strut – piston extension should be 3/4" to 1-3/4" from red line – struts clean and tires properly inflated.

7. Check right hand landing gear for security.
8. Check right hand door for security.
9. Check right hand engine compartment.
10. Check air intake scoop for obstructions.
11. Check right hand fuel tank – FULL – 100/130 octane – cap secured.
12. Check main gear box oil level.
13. Check baggage door – locked.
14. Check right hand static port – opening unobstructed.
15. Check tail cone for general condition.
16. Check tail rotor drive shaft for security.
17. Check stabilizer for security.
18. Check left and right position lights for operation and security.
19. Check tail rotor pitch links for binding or looseness. Check tail rotor blade for security and leading edge for nicks, bonding separation and general security.
20. Check tail rotor guard for damage and security.
21. Check left hand static port – opening unobstructed.
22. Check main rotor blades for nicks, bonding separation or looseness. If blade tape is installed, inspect tape for holes, bubbles or blisters, or separation and lifting.
23. Check main rotor pitch links for binding or looseness.
24. Check cyclic and collective walking beams for security.
25. Check blade dampers for proper security and oil level.
26. Check left hand fuel tank – FULL – 100/130 octane – cap secured.
27. Check engine oil – 6 quarts minimum, 8 quarts maximum.
28. Check fuel system for leaks.
29. Check exhaust manifold for cracks and looseness.
30. Check engine for oil leaks.
31. Check drive belt system.
32. Check left hand shock struts – piston extension should be 3/4" to 1-3/4" from red line – struts clean and tires properly inflated.
33. Check left hand landing gear for security.


FAA Approval: March 28, 2017

Revised: February 14, 2017

Report No. 28-AC-009

**F-28A Interior**


1. Check and adjust rudder pedals.
2. Check seat belts fastened or stowed.
3. Doors latched.
4. Set collective full down.
5. Check clutch disengaged.
6. Check throttle CLOSED.
7. Check mixture IDLE CUT OFF.
8. Check fuel valve ON.
9. Check magneto switch OFF.
10. Radio switches OFF.
11. Set master switch ON.
12. Check fuel quantity.
13. Check fuel pressure warning light (press to test).
14. Check trim motors for operation.
15. Check controls for freedom of operation.
16. Set altimeter.

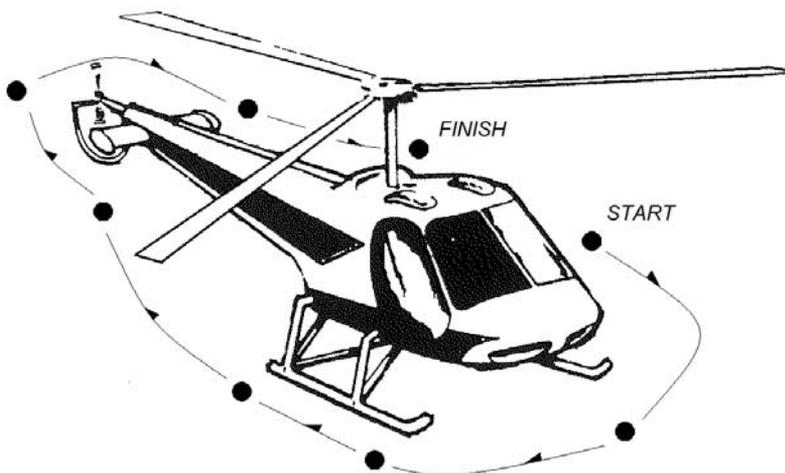**EXTERIOR INSPECTION**





## ENSTROM F-28A

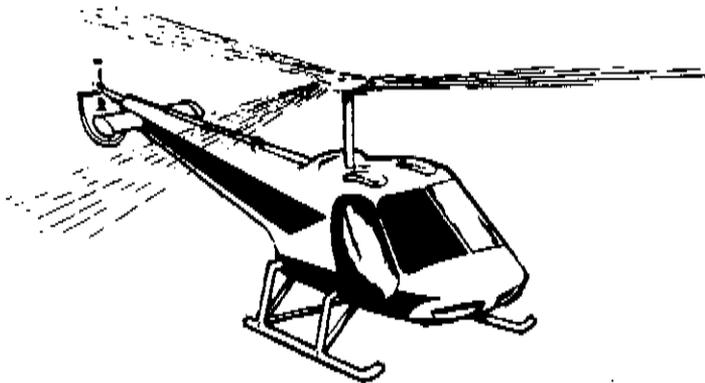

## SECTION 1

Type Certificate No. H1CE

Registration No. \_\_\_\_\_

Approved by E. L. Melton

for Chief, Engineering and Manufacturing Branch  
Flight Standards Division  
Central Division  
Federal Aviation Agency  
May 21, 1968

REPRINT OF BASIC MANUAL  
DATED MAY 21, 1968

**NOTE:** Mandatory compliance with the data contained in this section is required by law. This document must be carried in the aircraft at all times.

FAA Approval: May 21, 1968

## ENSTROM F-28A

## ENSTROM F-28A LOG OF PAGES AND REVISIONS

Rev. No.	Pages	Description	Date	F.A.A. Approved *
1	2A-1-2 2B-1-3 2C-1-3 2D-1 2E-1-6	Reprint of Basic Manual Dated May 21, 1968	3/25/68	<i>E. L. Melton</i>
2	ALL	Reprint of Basic Manual with Typographical Corrections and Page Numbers Changed	8/1/72	<i>E. E. Arnold</i>
3	FM3-3	Added information on Throttle Correlation, Added Page FM3-4, Revised Headings for Sections 1 thru 7 in Index.	8/11/73	<i>E. E. Arnold</i>
4	FM-2-3 FM-2-4	Placard added to Page FM2-4 for Ni. Cad. Batt. Installation.	4/3/74	<i>E. E. Arnold</i>

\* Approved for Chief, Engineering and Manufacturing Branch,  
Flight Standards Division,  
Great Lakes Region  
Federal Aviation Agency

NOTE: All revisions are indicated by a black vertical line

NOTE: Check page 2A-3 for supplemental applicability.

FAA Approval: May 21, 1968  
Revised 4/3/74

Report 28 AC 008

**LOG OF PAGES AND REVISIONS**

Rev. No.	Pages	Description	Date	FAA Approved
5	FM-0-1 FM-1-2 FM-2-1 FM-2-2 FM-4-1 FM-4-2 FM-4-3 FM-4-4 FM-5-3 FM-5-5 FM-5-7 FM-6-6 FM-6-7 FM-8-6	Added Information Revised Revised Revised Revised Added Added Added Revised Revised Added Revised Revised Added Information Form F-157 Revised	Aug 1/74	C. E. Arnold
6	FM-2-3 FM-3-2 FM-3-3	Added placard and operational information	Nov 23/82	M. A. Schutt
7	FM-0-2 FM-1-2B FM-2-3 FM-3-2	Added info Revised Added placard Added info	Aug 29/85	Gary S. Louser
8	0-10 FM-3-3	Added Blade Tape Information Minor Revision	Feb 17/89	Pat Moe

\* Approved for Manager  
Chicago Aircraft Certification Office  
Central Region  
Federal Aviation Administration

**NOTE:** All revisions are indicated by a black vertical line.

**NOTE:** Check page FM-1-3 for supplemental applicability.

FAA Approval: May 21, 1968

Revised: February 17, 1989

Report No. 28-AC-009

## LOG OF PAGES AND REVISIONS

Rev. No.	Pages	Description	Date	FAA Approved
8	FM-8-6 FM-9-3 FM-9-4 FM-9-5	Added Blade Tape Information Minor Revision Moved Text	Feb 17/89	Pat Moe
9	FM-4-5	Added Page	Apr 18/89	Pat Moe
10	Table of Contents FM-1-2.2 FM-4-4 FM-4-5  FM-8-5 FM-8-6	Added and Revised Page Numbering FAA Approval Revised Emergency Procedure and Moved Text Moved Text Added Text	May 22/98	Joseph C. Miess
11	i, ii  FM-1-2.2 FM-4-6 FM-4-7	Moved and Updated Text FAA Approval Added Lamiflex Bearing Failure Emergency Procedures	Jul 9/12	Joseph C. Miess
12	ii, iii, iv FM-0-10 FM-0-11 FM-0-12 FM-1-2.2 FM-1-2.3 FM-1-2.4 FM-1-3.1	Updated Text Preflight, Fuel Management  FAA Approval EASA Update  EASA Update	MAR 28 2017	<i>ACE-117C</i> 

\* Approved for Manager  
Chicago Aircraft Certification Office  
Central Region  
Federal Aviation Administration

**NOTE:** All revisions are indicated by a black vertical line.

**NOTE:** Check page FM-1-3 for supplemental applicability.

FAA Approval: March 28, 2017

Revised: February 14, 2017

Report No. 28-AC-009

**EASA LOG OF REVISIONS**

Rev. No.	Date	EASA Approved	FAA Approval on Behalf of EASA
1	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
2	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
3	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
4	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
5	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
6	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
7	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
8	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
9	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
10	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
11	Aug 17/15	FAA/EASA T.I.P.*	G. J. Michalik
12	Aug 16/17	FAA/EASA T.I.P.*	

\* Section 3.2 T.I.P.

FAA Approval: March 28, 2017

Revised: February 14, 2017

Report No. 28-AC-009

I INTENTIONALLY LEFT BLANK

## ENSTROM F-28A LOG OF SUPPLEMENTS

Supp. No.	Pages	Description	Date	FAA Approved*
1	FM-6-1 FM-6-2	Cargo Hook	6/5/69	<i>C. L. Melton</i>
2	FM-6-3 FM-6-8	Float Landing Gear	6/6/69	<i>C. L. Melton</i>
3	FM-6-9	External Litter	2/27/70	<i>C. L. Melton</i>
4	FM-6-10 FM-6-11	Auxiliary Fuel Tank	4/3/74	<i>C. L. Melton</i>

\* Approved for Chief, Engineering and Manufacturing Branch,  
Flight Standards Division,  
Great Lakes Region  
Federal Aviation Agency

**NOTE:** All revisions are indicated by a black vertical line.

FAA Approval: May 21, 1968

Revised: 4/3/74

Report No. 28-AC-009

This electronic document is not linked to a subscription for revision control or distribution. Refer to the Technical Publications Status link under the Technical Support Page of the Enstrom Helicopter website for the current revision level of the F-28A Rotorcraft Flight Manual.

**EASA LOG OF SUPPLEMENTS**

Rev. No.	Description	Date	EASA Approved	FAA Approval on Behalf of EASA
1	Cargo Hook	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
2	Float Landing Gear	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
3	External Litter	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A
4	Auxiliary Fuel Tank	Sep 28/03	Article 3, Commission Regulation (EU) 748/2012	N/A

FAA Approval: March 28, 2017

Revised: February 14, 2017

Report No. 28-AC-009

This electronic document is not linked to a subscription for revision control or distribution. Refer to the Technical Publications Status link under the Technical Support Page of the Enstrom Helicopter website for the current revision level of the F-28A Rotorcraft Flight Manual.





**NOTE: Mandatory compliance with the data contained in this section is required by law.**

## FAA OPERATING LIMITATIONS

### POWER PLANT LIMITATIONS

Engine:	Lycoming Model H10-360-C1A or H10-360-C1B	
Fuel:	100/130 minimum grade	
Oil Viscosity:	Above 60°F	SAE 50
	30 - 90° F	SAE 40
	0 - 70°F	SAE 30
	Below 10°F	SAE 20
Horsepower:	205 HP all operations @ 2900 RPM	
Operating Engine RPM:	2900 maximum 2750 minimum	
Engine Idling RPM:	1400 minimum (clutch disengaged)	
Manifold Pressure:	Full throttle, sea level engine	
Oil Temperature:	245° Maximum	
Oil Pressure:	60 - 90 PSI, normal operation 25 PSI, idling minimum 100 PSI, starting-warmup	
Transmission Oil Temperature:	220°F maximum	
Cylinder Head Temperature:	475°F maximum	

### ROTOR - FLIGHT LIMITATIONS (POWER OFF)

Maximum:	385 RPM
Minimum:	313 RPM

### INSTRUMENT MARKINGS

Rotor Tachometer	Red Line Red Line Green Arc	385 RPM 313 RPM 313 - 385 RPM
Engine Tachometer	Red Line Red Line Green Arc	2750 RPM 2900 RPM 2750 - 2900 RPM
Airspeed Indicator	Red Line	112 MPH

FAA Approval: May 21, 1968

Reprint: 6/1/72 Revised: 8/1/74

Report 28-AC 009

Oil Temp.	Red Line	245° F
	Green Arc	120° - 245° F
	Yellow Arc	60° - 120° F
Oil Pressure	Red Line	100 PSI
	Green Arc	60 - 100 PSI
	Yellow Arc	25 - 60 PSI
	Red Line	25 PSI
Cylinder Head Temperatures	Red Line	475° F
	Green Arc	200° - 475° F
Transmission Oil Temp.	Red Line	220° F
	Green Arc	0° - 220° F

### AIRSPED LIMITATIONS

Never exceed speed:  $V_{ne}$ : 112 MPH IAS at S.L. -  
for variations with  
altitude see Fig. 1

### ALTITUDE LIMITATIONS

Maximum operating: 10,000 feet pressure altitude  
Maximum for takeoff  
and landing: 7,000 feet density altitude

### WEIGHT LIMITATIONS

Maximum Approved  
Weight: 2150 pounds

### CENTER OF GRAVITY LIMITATIONS

Forward: 92.0 inch Station  
Rearward: 98.0 inch Station

This helicopter is to be loaded in accordance with SECTION 7  
LOADING INFORMATION.

NOTE: Station 0 (Datum) is located 100 inches forward centerline  
of main rotor hub.

### TYPE OF OPERATION

The helicopter is approved for operation under DAY & NIGHT -  
VFR - NON-ICING conditions.

Night operation authorized under visual contact flight conditions.  
Orientation must be maintained by ground light or adequate celestial  
illumination.

Instrument flight prohibited.

FAA Approval: May 21, 1968  
Reprint 6/1/72 Revised 8/1/74

Report 28 AC 009

## ENSTROM F-28A

No acrobatic maneuvers permitted.

Crosswind and downwind: When hovering or landing, adequate flight control can be maintained in winds up to 20 mph.

Operation with doors removed is approved.

## PLACARDS

"THIS HELICOPTER MUST BE OPERATED IN COMPLIANCE WITH THE OPERATING LIMITATIONS SPECIFIED IN THE FAA APPROVED ROTORCRAFT FLIGHT MANUAL."

## AIR SPEED LIMITATIONS - MPH

Never Exceed Speeds - Miles per Hour IAS

Pressure Altitude	Outside Air Temperature - °F						
	-20	0	20	40	60	80	100
SL	112	112	112	112	112	104	98
2000	112	112	112	105	98	92	87
4000	112	106	99	92	87	83	80
6000	100	98	88	83	79	75	72
8000	89	84	79	75	71	68	
10000	80	75	71	68	65		
12000	72	68	65	62			

"NO SMOKING" (This placard not required when an approved ashtray is installed.)

"THIS HELICOPTER IS APPROVED FOR OPERATION UNDER DAY & NIGHT - VFR - NON-ICING CONDITIONS ONLY."

"60 LBS. MAX. THIS COMPARTMENT" when baggage compartment is installed.

"STOW FLAT ON FLOOR BEFORE FLIGHT" (This placard to be placed on clutch handle.)

"COLLECTIVE FRICTION TO BE USED FOR GROUND OPERATION ONLY" (This placard to be placed adjacent to the collective friction device.)

FAA Approved: May 21, 1968  
Revised: August 29, 1985

Report 28-AC-009

**FOR NICKEL-CADMIUM BATTERY INSTALLATION ONLY****BATTERY TEMPERATURE ALERT**

120° F - MONITER BATTERY TEMPERATURE (AMBER LIGHT)

130° F - TURN OFF ALTERNATOR SW.

REDUCE ELECTRICAL LOAD, TURN ALT. SW. ON IF AMBER LT. GOES OUT IN FLIGHT.

150° F - TURN OFF MASTER SWITCH.

(RED ARC) LAND ASSOON AS PRACTICAL. INSP. BATTERY PER MANUF. INSTR. BEFORE FURTHER FLIGHT.

EACH 250 HR. INTERVALS PERFORM FUNTIONAL TESTS PER K.S. AVIONICS INSTRUCTIONS.

## FAA NORMAL OPERATIONS

### F-28A NORMAL ENGINE STARTING PROCEDURE

1. Master switch ON.
2. Mixture control IDLE CUT OFF.
3. Fuel valve ON.
4. Throttle — crack slightly.

**CAUTION:** Do not open throttle during starting engine; overspeed can result.

**NOTE:** Check for clutch disengagement.

5. Mixture FULL RICH.
6. Fuel boost ON, check pressure for slight increase 1 to 3 seconds, then return fuel boost to OFF.
7. Mixture OFF.
8. Magneto switch, BOTH.
9. Engage starter.
10. When engine starts, advance mixture slowly.
11. Set engine RPM to 15-1600 RPM.
12. Fuel boost ON. (Pump must be on at all times in flight.)
13. Check engine oil pressure, 25 PSI minimum.  
**CAUTION:** Shut down engine if minimum oil pressure is not reached within 30 seconds.
14. Disconnect external power (if used).
15. Alternator switch ON.

### F-28A ENGINE STARTING PROCEDURES, HOT CONDITION

1. Master switch ON.
2. Magneto switch OFF.
3. Throttle cracked.
4. Mixture control FULL RICH.
5. Turn on fuel boost pump 5 to 6 seconds.
6. Turn boost pump off.
7. Mixture control OFF.
8. Throttle — FULL OPEN.
9. Engage starter 5 to 6 seconds to clear engine.
10. Close throttle and crack slightly.
11. Magneto switch BOTH.
12. Engage starter until engine fires and advance mixture slowly.
13. Fuel boost ON. (Pump must be on at all times in flight.)

**NOTE:** It is important to follow this procedure on hot starts so that the prolonged fuel flow in the lines will eliminate the vapor locks and cool the lines for a proper start.

## ENSTROM F-28A

F-28A ROTOR ENGAGEMENT

1. Check collective full down and FRICTION LOCKED.

NOTE: Maintain collective in down and locked position throughout starting and warmup procedure.

CAUTION: Collective friction to be used for ground operation only.

2. Rudder pedals neutral.
3. Set longitudinal and lateral trim to center the cyclic stick.
4. Check aircraft vicinity for personnel and equipment.
5. Set engine to 14-1500 rpm.

NOTE: Maintain fixed throttle during rotor engagement.

6. Slowly engage clutch handle at 1400-1500 engine rpm until rotor rpm reaches 100 rpm.

7. Close throttle.

8. Fully engage clutch when engine/rotor needles are superimposed (marry).

NOTE: The clutch disengage warning light will go out when the clutch is fully engaged.

9. Place clutch handle in stowed position.

10. Advance throttle to 1800 rpm.

F-28A ENGINE WARMUP AND GROUND CHECK

1. Warm engine at 1800 rpm until cylinder head temperature reaches 200°F.

2. Check engine oil temperatures and pressure to ascertain whether they are within the green arcs.

NOTE: For faster oil warmup in cold weather, 2300 rpm may be used after cylinder temperature has reached 200°F.

3. Increase engine rpm to 2750 to 2900 rpm and check for rpm drop on left and right magnetos. 100 rpm is permissible on either magneto.

NOTE: No engine roughness should be apparent when operating on either left or right magneto.

4. Check ammeter charging indication.

5. Gently move cyclic, observe rotor tip path plane for control response.

6. Close throttle, observe engine and rotor needles for separation.

NOTE: Needle separation indicates proper operation of overrunning clutch.

## ENSTROM F-28A

7. Check following before takeoff:
  - a. Check all instruments for proper indication.
  - b. Seat belts and doors latched.
  - c. Fuel ON.
  - d. Fuel boost ON. (Pump must be on at all time in flight.)
  - e. Mixture FULL RICH.
  - f. Fuel pressure warning - green indication.
  - g. Clutch warning light - push to test - red light goes out when released.
  - h. Release collective friction.

NOTE: Keep hand on collective and maintain down position when friction lock is disengaged.

  - i. Set throttle friction as desired.

F-28A ENGINE COOLING AND SHUT-DOWN PROCEDURE

1. Stabilize temperatures at 1800 RPM until cylinder temperatures drop to 350°F.
2. Cyclic trim, neutral.
3. Tighten collective friction, collective down.
4. Set engine FULL IDLE.
5. Disengage clutch.

CAUTION: Do not disengage clutch unless engine is at FULL IDLE; engine overspeed may result. Clutch disengagement is signaled by a red warning light on the instrument console.

6. Fuel boost pump OFF.
7. Mixture IDLE CUT OFF.
8. Magneto switch OFF.
9. Alternator switch OFF.
10. Master switch OFF.
11. All switches OFF.
12. Fuel valve CLOSED.

FLIGHT INFORMATIONTAKEOFF:

1. Follow normal helicopter takeoff procedure at 2900 RPM.
2. Best rate of climb speed is approximate 58 MPH IAS. (See Height-Velocity Curve, Figure 4.)

CRUISE:

Do not exceed  $V_{NE}$  as shown on placard and  $V_{NE}$  versus Altitude Curve, Figure 1.

FAA Approval: May 21, 1968

Report No. 28-AC-009

Revised: FEB 17 1999

## ENSTROM F-28A

## DESCENT:

CAUTION: Exercise care during descent to avoid exceeding  $V_{NE}$ .

## RUNNING LANDING:

1. Maximum recommended ground contact speed is 35 MPH. Reduce speed on rough surfaces.
2. After ground contact the ship must have zero forward motion before a collective pitch is lowered.

THROTTLE CORRELATION DEVICE

CAUTION to operators of F-28A helicopters equipped with the improved throttle correlation device:

Helicopters produced after S/N 153 may be equipped with improved throttle correlation mechanisms. Earlier helicopters may be equipped with the improved correlator as a retrofit.

Improved correlator-equipped helicopters are identified by having a placard placed on the pilot's (left side) collective shaft behind throttle grip.

There will be a noticeable difference in behavior between the two types of throttle. The original throttle requires considerable manipulation of the grip by the pilot to control rpm. The improved correlator requires very little manipulation of the grip; however, it is desirable to carry more throttle friction with this arrangement in order to prevent feedback forces during collective inputs from rolling the grip in the pilot's hand.

Final determination is that this correlation device is an attribute to controllability and is a definite improvement to the Enstrom F-28A collective/throttle system.

All vehicles equipped with this device will have the following placard attached to the pilot's collective stick adjacent to the throttle:

CAUTION: THIS HELICOPTER IS EQUIPPED  
WITH AN IMPROVED THROTTLE CORRELATION  
DEVICE.









## EMERGENCY OPERATING PROCEDURES

### ENGINE FAILURE

1. Enter normal autorotation and stabilize at 58 MPH. (Minimum rate of descent.)
2. At about 75 feet above ground, apply aft cyclic to reduce forward speed.
3. When about 20–25 feet above surface, begin to level helicopter and apply collective pitch as necessary to cushion a level landing.

### LIGHTING FAILURE

1. Landing can be made in case of landing light failure by illumination from position lights.
2. Instrument lighting is provided by three lights and while satisfactory landings have been demonstrated without instrument illumination, a supplemental light source is recommended.

### FIRE

Fires may have several sources of origin. Generally they may be classified as engine compartment or cabin compartment, fuel or oil supported, or electrical.

#### FIRE ON GROUND

1. Shut off engine and all switches.
2. Shut off fuel valve.
3. Determine source of fire and use fire extinguisher to extinguish any flames.

**NOTE: Do not restart or fly aircraft until cause of fire is investigated and corrected.**

#### FIRE IN FLIGHT

If the presence of odor and/or smoke is detected, proceed as follows:

1. Check instruments for correct reading.
2. Shut off master and alternator switches.
3. Unlatch doors and let them trail open.
4. If smoke and odor persist, proceed to suitable area and land aircraft.
5. If inspection of aircraft indicates presence of flames, shut off engine and fuel valve and extinguish flames with fire extinguisher.

**NOTE: If flames were present, do not attempt to start or fly aircraft until the cause of the fire has been investigated and corrected. If no flames were present and it is**

suspected that the electrical system was the source of the smoke and odor; check for faulty electrical components and correct before flying the aircraft.

Severe leakage of oil onto the exhaust system may cause considerable smoke to enter the cabin. In such case aircraft should not be flown until cause of leakage is investigated and corrected.

### **TAIL ROTOR (Anti-Torque) SYSTEM FAILURE**

There are two major possibilities for failure of the tail rotor (anti-torque) system and subsequent loss of directional control as follows:

1. Failure of any portion of tail rotor drive system that causes stoppage or physical loss of the tail rotor blades.
2. Failure of any portion of the mechanisms that cause pitch change of the tail rotor blades.

Upon loss of directional control, the pilot must immediately determine the type of malfunction that has occurred (No. 1 or 2 above) and select the proper emergency procedure.

### **TAIL ROTOR DRIVE SYSTEM FAILURE**

**During cruising flight** (aircraft will rotate to the right with full left pedal):

1. Cut throttle full off immediately (aircraft will slow down or stop its rotation).
2. Complete autorotational landing.

**During cruising flight** (aircraft will rotate to the right with full left pedal):

1. Power full off immediately, enter autorotation.
2. Complete autorotation to nearest suitable area.

**NOTE:** If no suitable area is available within autorotative distance, pilot should proceed as follows after having established stabilized autorotation with at least 60 MPH airspeed.

1. Increase collective pitch and power gradually (maintaining 60 to 80 MPH airspeed) until yaw to the right reaches approximately 45 degrees
2. Continue flight in this fashion using cyclic stick for directional

control until suitable autorotational landing site is reached.

3. When 200 ft. altitude or more over suitable area re-establish full autorotation and land.

### TAIL ROTOR CONTROL SYSTEM FAILURE

**NOTE:** Loss of control may be caused by failure of left pedal controls, right pedal controls or failure of pitch link to an individual tail rotor blade. On the Enstrom tail rotor, it is normal (if uncontrolled or unattended) for the blades to assume a nearly neutral pitch condition. Upon loss of ability to fully control tail rotor during cruising flight, proceed as follow:

#### PITCH LINK FAILURE (One tail rotor blade)

Aircraft will yaw to the right initially and will subsequently need an abnormal amount of left pedal to maintain straight and level flight since only one blade is providing anti-torque thrust.

1. Fly at low cruise power to suitable landing area and make normal power approach.
2. Complete a slow run on landing at low power setting.

#### FAILURE OF LEFT PEDAL CONTROLS

Aircraft will yaw to the right. Amount of yaw will depend on airspeed and amount of power being used.

1. Remove feet from both rudder pedals.
2. Reduce power to low cruise setting (18 to 19" Hg. manifold pressure will create zero yaw at 60 MPH).
3. Fly to suitable area and complete normal shallow power on approach at 60 MPH.
4. Manipulate power and collective pitch so that aircraft touches down straight ahead at an airspeed of 0 - 10 MPH. Reduce power and collective cautiously as skids contact surface.

**NOTE:** At low airspeed, power settings UNDER approximately 18" Hg. will cause yaw to the left. Power settings OVER 18" Hg. will cause yaw to the right. Do not attempt to abort the emergency landing after airspeed is slowed below 40 MPH.

#### FAILURE OF RIGHT PEDAL CONTROLS

Rudder control will be normal at power settings over 18" MP. Power settings under 18" MP will produce yaw to the left. Proceed as follows:

1. Fly to suitable landing area at a power setting of at least 18" MP.

FAA Approval: May 21, 1968

Revised: August 1, 1974

Report No. 28-AC-009

2. Complete normal shallow power approach at 60 MPH (do not autorotate).
3. Manipulate power and collective pitch so that aircraft touches down straight ahead at an airspeed of 0-10 MPH. Reduce power and collective pitch cautiously as skids contact surface.

**NOTE: Application of power to over 18" MP will make aircraft more controllable. Therefore, landing attempt may be aborted and new approach initiated as many times as necessary.**

### LANDING IN WATER (Ditching)

If ditching is unavoidable without other recourse, proceed as follows:

#### DITCHING WITH POWER

1. Descend to low hovering altitude over water.
2. Unlatch both doors and exit passengers.
3. Hover aircraft clear of all personnel in water.
4. Turn off master and alternator switches.
5. Complete hovering autorotation into water.
6. As collective pitch reaches full up and aircraft settles in water, apply full lateral cyclic in direction aircraft tends to roll.
7. After rotor strikes water and stops, climb out and clear aircraft.

#### DITCHING WITHOUT POWER

1. Turn off master and alternator switches.
2. Unlatch both doors.
3. Complete normal autorotation to land in water at zero airspeed.
4. As collective pitch reaches full up and aircraft settles in water, apply full lateral cyclic in direction aircraft tends to roll.
5. After rotor strikes water and stops, exit all occupants and clear aircraft.

#### ALTERNATOR FAILURE

A malfunction of the alternator will be indicated by zero charge rate or constant discharge on the ammeter. To put the alternator back on line, proceed as follows:

**NOTE: Use the following procedure if the alternator excite circuit breaker (ALT EXC or ALTNR EXC) is not installed.**

1. Alternator circuit breaker in.

FAA Approval: May 21, 1968

Revised: May 22, 1998

Report No. 28-AC-009

2. Cycle the MASTER and ALTERNATOR switches.
3. If alternator is not restored or goes off line again, turn off the alternator switch and all nonessential electrical equipment. Land as soon as practicable.

**NOTE: Use the following procedure if the alternator excite circuit breaker (ALT EXC or ALTNTR EXC) is installed.**

1. Alternator circuit breaker in.
2. Alternator excite circuit breaker in.
3. Cycle the ALTERNATOR switch.
4. If alternator is not restored or goes off line again, turn off the alternator switch and all nonessential electrical equipment. Land as soon as practicable.

#### **MAIN ROTOR GEARBOX**

If, in normal flight, the main rotor gearbox red line temperature is exceeded, the aircraft should be landed at the next suitable landing site.

#### **ABNORMAL VIBRATIONS**

Vibrations in this helicopter can usually be classified as either low frequency or high frequency. Low frequency vibrations are generally caused by the main rotor system while the high frequency vibrations usually originate from the engine, drive system, or tail rotor. Any abnormal vibrations are an indication that something is not correct and should be referred to a mechanic before further flight. If a vibration suddenly appears during a flight, it is an indication that something has suddenly changed. The helicopter should be landed as soon as practical and inspected to find the cause of the vibration. After the cause of the vibration has been identified, the pilot and the mechanic can determine whether the helicopter can be safely flown or should be repaired before further flight. An abnormal vibration is reason to get the aircraft down as soon as possible, but the pilot must also use caution and select the safest possible landing site, working around wires, people, and other obstructions.

## LAMIFLEX BEARING FAILURE

A lamiflex bearing failure will cause a rough ride. Initially, this may be only a minor distraction, but in some cases, it can progress quickly to the point where the bearing physically comes apart. In this case, control of one blade will be stiff, the main rotor will be severely out of balance, and aircraft control may be in jeopardy. The following are indications of a lamiflex bearing failure as it progresses.

1. A significant worsening of the ride quality from one flight to the next or from one day to the next for no apparent reason.
2. The aircraft cannot be trimmed at a hover or runs out of trim at maximum forward flight speed when previously there was no problem.
3. The collective suddenly ratchets when moved up and down when previously it had been smooth or the collective suddenly feels heavy.
4. The cyclic suddenly wobbles or moves in a circular motion when previously it had been smooth.
5. The cyclic suddenly starts "chucking," (moving sharply in a left rear to right forward direction in about a 3/4" amplitude with a very crisp motion) especially at high power or high airspeed.

**WARNING:** This last indication where the cyclic starts sharply moving may be followed within a few minutes by a total failure of the bearing.

**Emergency Procedures – Impending Lamiflex Bearing Failure**

The following are the procedures to be used in dealing with lamiflex failures. Refer to the preceding paragraph for the description of the failure symptoms.

1. Moderate – Slight worsening in ride or not able to trim:
  - a. **LAND – As soon as practicable.** Have all three bearings inspected before the next flight.
2. Serious – Ride continues to get worse or the cyclic or collective start showing symptoms:
  - a. **LAND – Immediately.** Have all three bearings inspected before further flight.

**Emergency Procedures – Total Lamiflex Bearing Failure**

The following are the procedures to be used in dealing with total lamiflex bearing failure.

1. **Maintain control of the aircraft.**
2. **Collective – Lower slowly.** Commence an 800-900 ft/min descent.

**WARNING:** Do **NOT** autorotate. Aircraft control at the termination of an autorotation may be questionable with a totally failed lamiflex.

3. **Airspeed – Reduce** to 50-60 MPH.
4. **Rotor RPM – Reduce** to minimum power on RPM.
5. **Maneuvering – Minimize.**
6. **Land** – Perform a running landing. Touch down at or above Effective Translational Lift (ETL), approximately 20 knots if terrain permits.

**WARNING:** It may not be possible to control the aircraft in a hover.

8. **Shutdown – Complete.**







## FAA PERFORMANCE DATA

Best rate of climb speed is 58 M.P.H. I.A.S.  
 Minimum rate of descent speed is 58 M.P.H. I.A.S.

**$V_{ne}$  never exceed VS. DENSITY ALTITUDE**  
 ( $V_{ne}$  demonstrated at 2750 engine rpm)

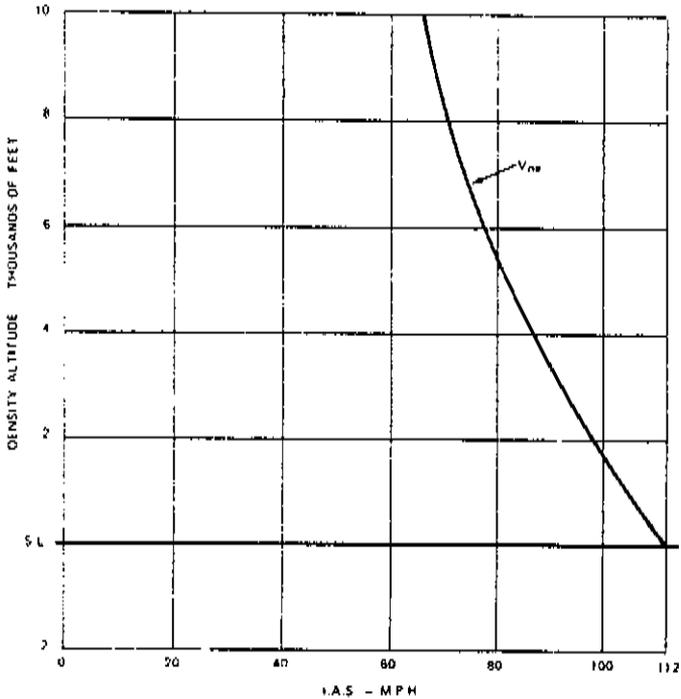


Figure 1

FAA Approval: May 21, 1968

# MODEL F-28A AIRSPEED CALIBRATION

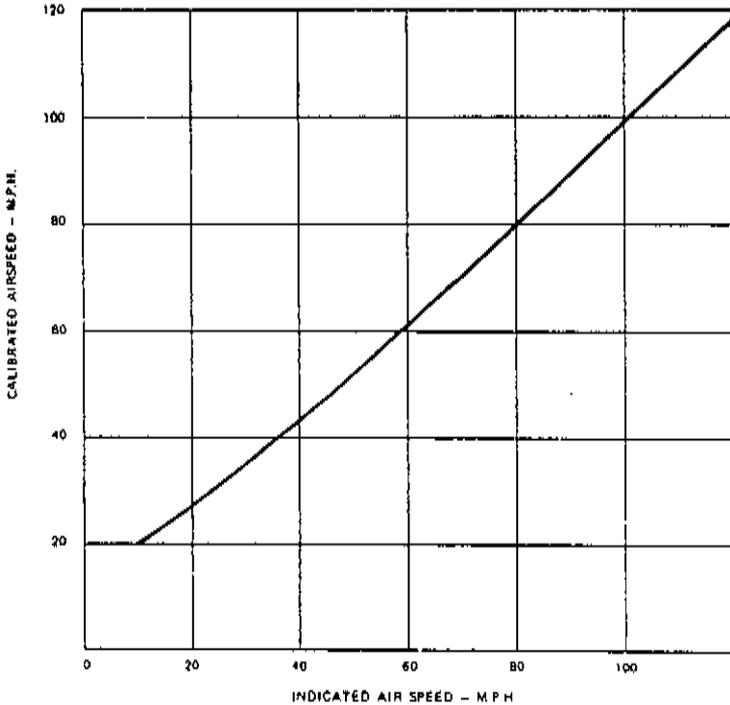


Figure 2

FAA Approval: May 21, 1968  
Reprint 6/1/72

Report 28 AC 009

### HOVER CEILING IN GROUND EFFECT

3 1/2 foot skid height  
(2900 RPM)

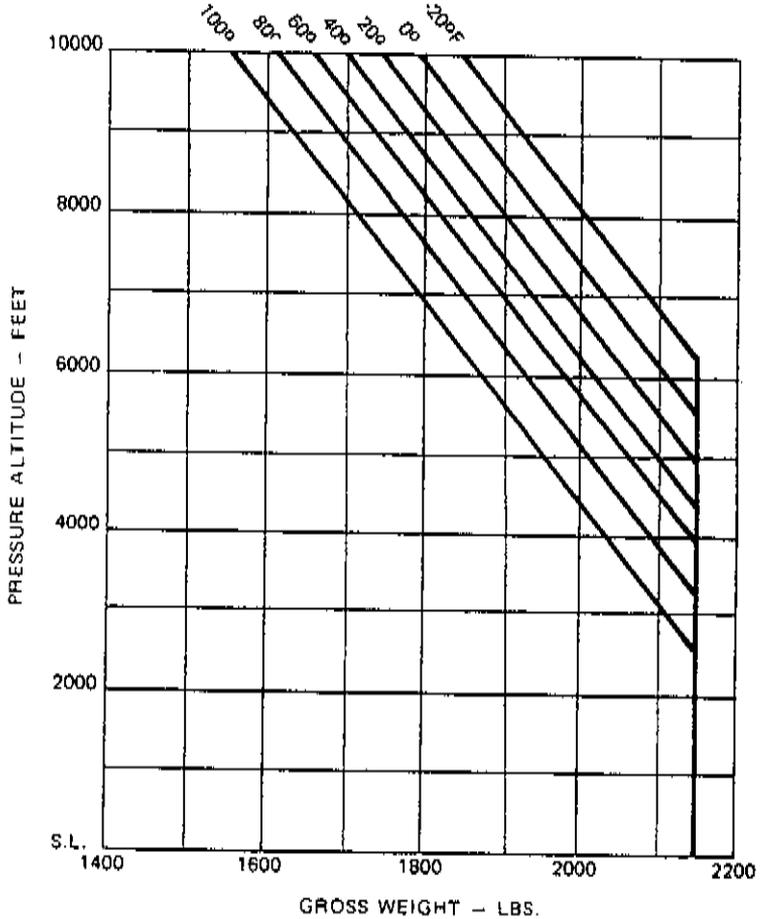


Figure 3

FAA Approval: May 21, 1968

Revised 8/1/74

# HEIGHT-VELOCITY DIAGRAM

For Operation at Sea Level (Tests conducted on prepared surfaces)

**AVOID OPERATION IN SHADED AREAS**

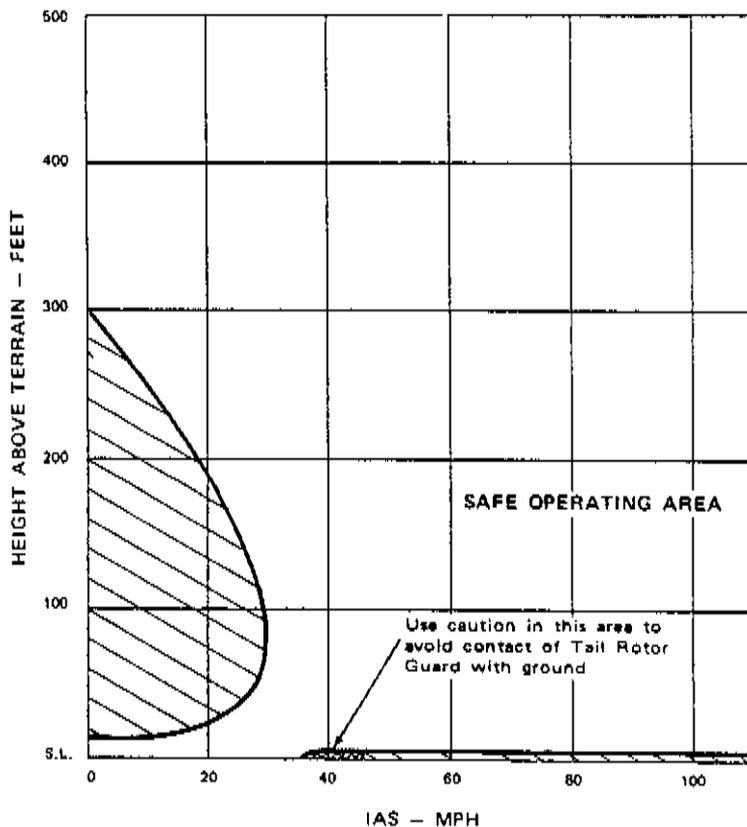


Figure 4a


FAA Approval: May 21, 1968  
Reprint 6/1/72

Report 28 AC 009

## HEIGHT-VELOCITY DIAGRAM

For Operation at 7,000 Ft. Density Altitude  
(† Tests conducted on prepared surfaces)

AVOID OPERATION IN SHADED AREAS

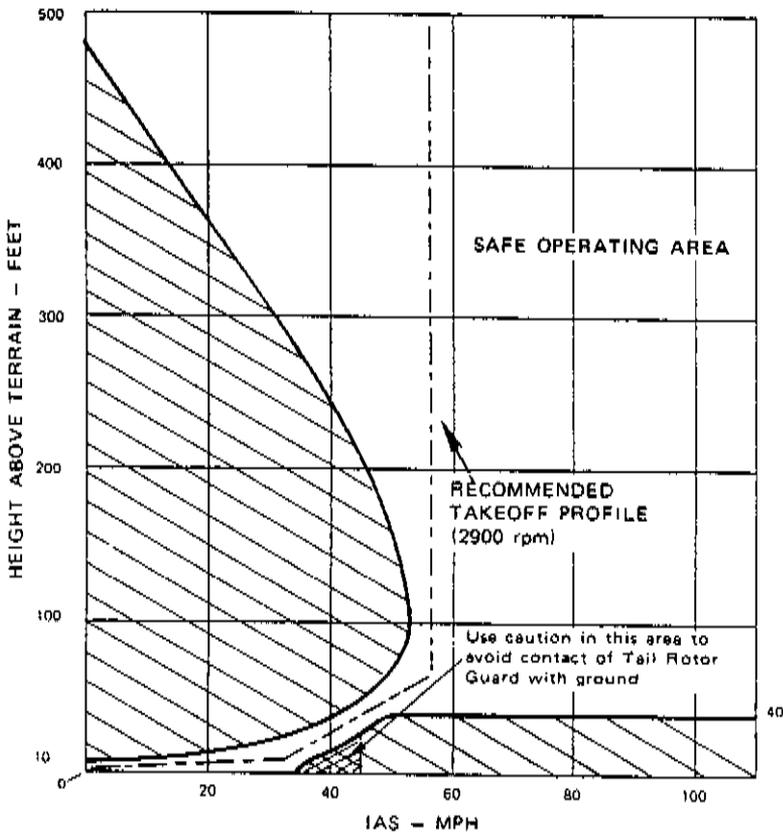

Weight applicability of H-V Diagram is based on hover capability at 3.5 feet skid height. (Reference FM 5-3.)

FAA Approval: May 21, 1968

Revised 8/1/74

Figure 4b

## DENSITY ALTITUDE CHART

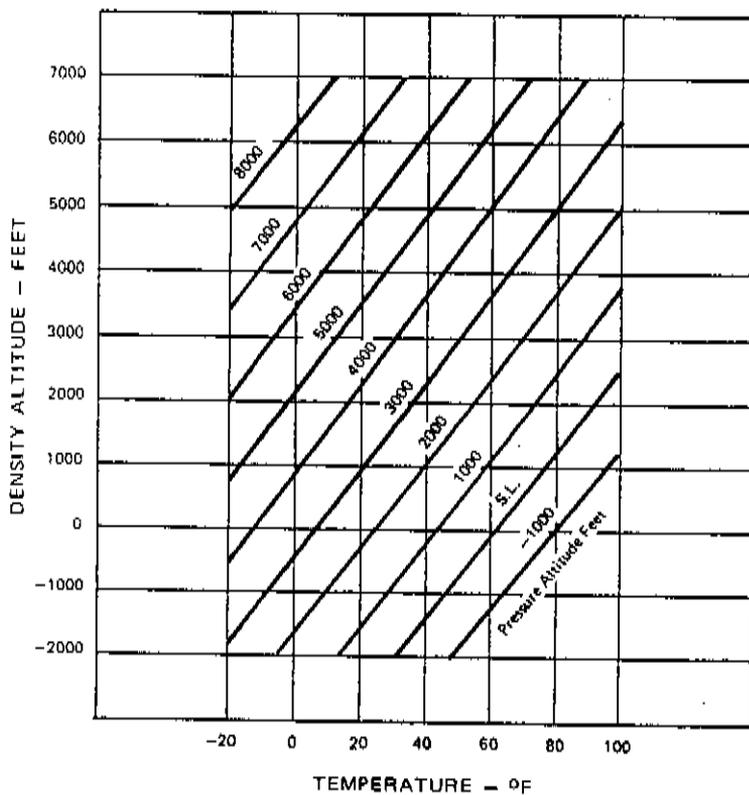


Figure 5

FAA Approval: May 21, 1968

REPORT 28 AC 009

## RATE OF CLIMB/DENSITY ALTITUDE

2150 LBS. GROSS WEIGHT

58 mph I.A.S.

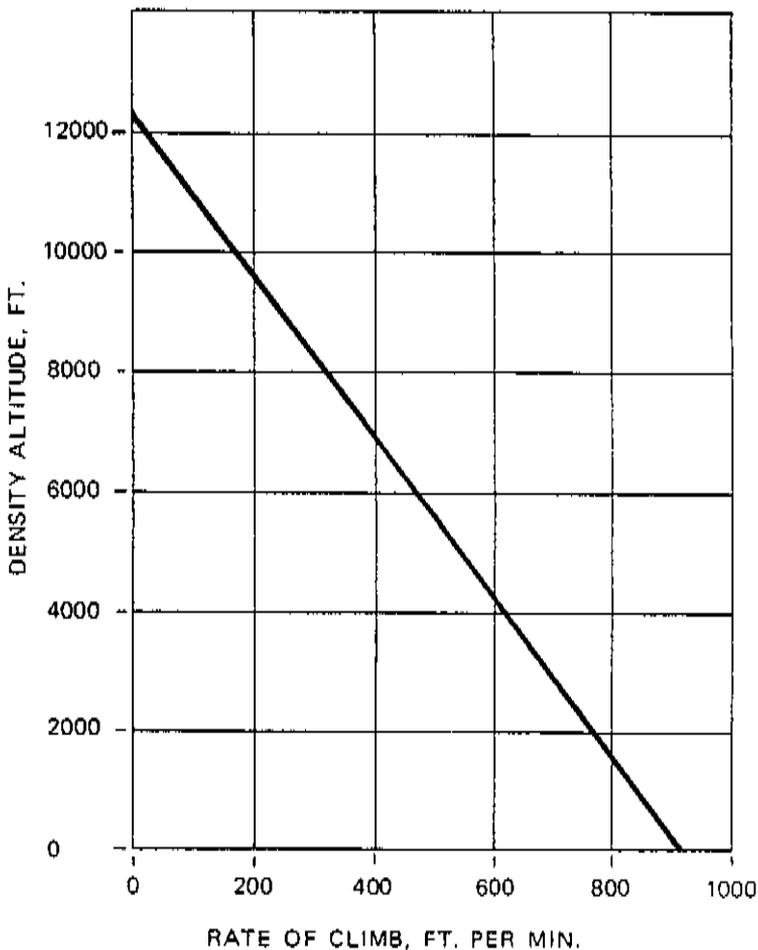


Figure 6

FAA Approval: August 1, 1974

This electronic document is not linked to a subscription for revision control or distribution. Refer to the Technical Publications Status link under the Technical Support Page of the Enstrom Helicopter website for the current revision level of the F-28A Rotorcraft Flight Manual.



# ENSTROM MODEL F-28A

## EXTERNAL LOADS SUPPLEMENT NO. 1

### INTRODUCTION

The Enstrom Cargo Hook Installation (Drawing No. 22000), when installed, will permit the owner or operator, with a valid Rotorcraft External Operator Certificate, to utilize the helicopter for transportation of external cargo, for compensation or hire, when operated by a qualified pilot.

The cargo hook kit incorporates electro-mechanical and mechanical cargo release features.

### I. OPERATING LIMITATIONS

#### ATTENTION

This helicopter meets the structural and design requirements of CAR Part 6: providing the data contained in this supplement are included in and imposed by the Combination Flight Manual.

#### WEIGHT LIMITATIONS

Gross weight not to exceed maximum allowable for the basic helicopter.

#### AIRSPEED LIMITATIONS

80 MPH maximum with external load. Caution should be exercised as handling characteristics may be affected due to the size and shape of the cargo load.

#### PLACARDS

"Approved For Class B Rotorcraft – Load Operation. Occupancy Limited To Flight Crew Member When Carrying External Load." (Installed on instrument panel.)

"External Load Limit 500 lbs." (Installed on the cargo attaching hook.)

#### CENTER OF GRAVITY

The CG of the Cargo Hook when installed is located at station 96.0.

Actual weight of complete installation is 15.0 lbs.

#### TYPE OF OPERATION

The helicopter meets the airworthiness requirements of FAR 133,

for Class B rotorcraft load combinations with external cargo loads up to 500 pounds and total gross weight not to exceed the maximum allowable for the basic helicopter.

Normal operation under CAR Part 6 (New FAR Part 27) can be conducted with the cargo hook installed, providing cargo is not being transported.

## II. OPERATING PROCEDURES

### STATIC ELECTRICITY DISCHARGE

Provide ground crew with instructions as follows: Discharge helicopter static electricity, before attaching cargo, by touching the airframe with a ground wire or if a metal sling is used, the hookup ring can be struck against the cargo hook. If contact has been lost after initial grounding, the helicopter should be electrically regrounded and, if possible, contact maintained until hookup is completed.

### CARGO HOOK OPERATION

Position instrument panel CARGO RELEASE arming switch (circuit breaker) to OFF when attaching cargo, then move switch to ON as desired, during approach for release.

PULL mechanical manual release lever HANDLE to drop cargo in the event of an electrical failure.

#### NOTE

The cargo mechanical release will function regardless of position of the CARGO RELEASE arming switch.

## ENSTROM F-28A

### FLOAT LANDING GEAR SUPPLEMENT NO. 2

#### DESCRIPTION

The float installation kit consists of two multi-cell (5 compartment) Air Cruisers No. 23D24409 inflatable floats, attachment fittings, right engine side cowl modified for installation of induction air box, relocated pitot tube, lengthened universal blocks, tail rotor strike indicators, and two landing lights.

#### SECTION 2 – OPERATING LIMITATIONS

Same as basic F-28A with the following exceptions:

##### ALTITUDE LIMITATIONS

Maximum for take-off and landing: 4000 density altitude.

#### SECTION 3 – NORMAL OPERATIONS

##### F-28A ROTOR ENGAGEMENT

**NOTE:** Prior to engaging the rotor the helicopter should either be secured or set adrift in an area sufficient to make at least one and one-half complete rotations due to engagement rotor torque. Allowance should be given to helicopter drift.

Follow normal engagement procedures until needles marry, then smoothly advance throttle until tail rotor becomes effective (approximately one helicopter revolution  $\approx$  1800 engine RPM).

#### FLIGHT INFORMATION

##### TAXIING

Taxi at slow speeds with partial collective to prevent float bows from nosing under. Safe operation can be accomplished in waves up to 18 inches (trough to crest).

##### RUNNING LANDING

1. Maximum recommended water contact speed is 30 MPH. Reduce speed on rough water.
2. After water contact, avoid rapid lowering of collective pitch.

**NOTE:** To avoid possible float damage on land, use minimum ground contact speed.

##### BASE ALTITUDE CHANGE

1. Normal base pressure 1.5 psig.
2. For flights to lower altitude – over inflate at base altitude .5 psig per 1000 feet anticipated altitude change.

3. For flights to higher altitude – 10,000 feet differential altitude permitted.

NOTE: Set float pressure to 1.5 psig at new base altitude.

## SECTION 4 – EMERGENCY PROCEDURES

### ENGINE FAILURE

1. Enter normal autorotation and stabilize at 58 MPH (for maximum glide distance).

NOTE: Night Operation – turn on landing light.

2. At about 75 feet above ground/or water, apply aft cyclic to reduce forward speed.
3. When about 20-25 feet above surface, begin to level helicopter and apply collective pitch as necessary to cushion a level landing.

### WARNING

Touchdown speeds should be kept below 20 MPH for emergency autorotative water landings, especially with forward cg (92" to 94").

## SECTION 7 – WEIGHT AND BALANCE

A weight and balance should be conducted after the float kit has been installed per the instructions on pages FM-3-1 through FM-3-4. The float equipped helicopter is approved for operation at the same c.g. range as the basic F-28A.

Approved Forward c.g. Limit                      92 in.

Approved Aft c.g. Limit                              98 in.


## ENSTROM F-28A FLOAT EQUIPPED HELICOPTER FAA PERFORMANCE DATA

Best rate of climb speed is 58 MPH – IAS

Minimum rate of descent speed is 58 MPH – IAS

**V<sub>ne</sub> never exceed VS. DENSITY ALTITUDE**

(V<sub>ne</sub> demonstrated at 2750 engine RPM)

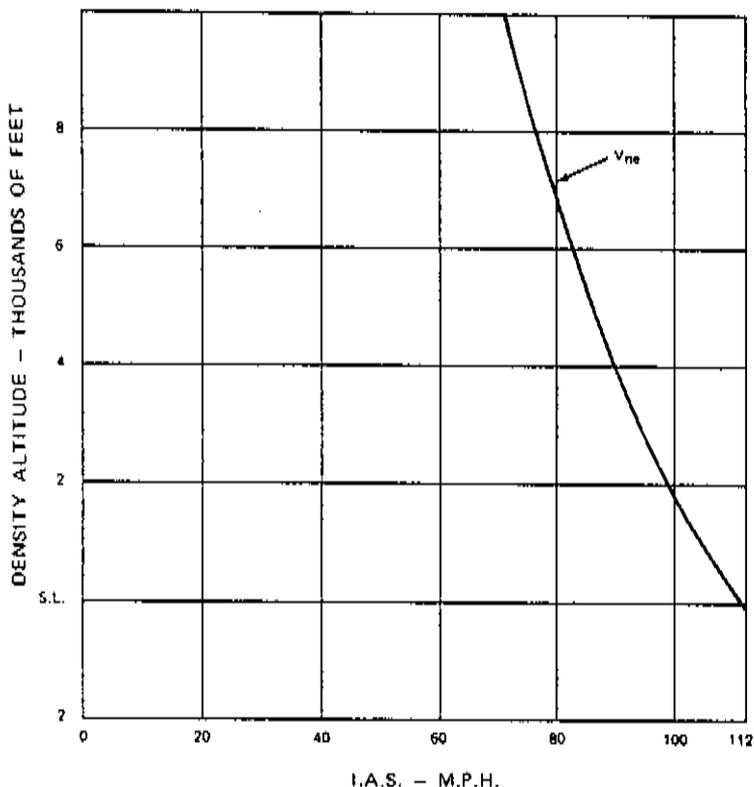


FAA Approval: June 6, 1969

REPORT 28-AC-009

# ENSTROM F-28A FLOAT EQUIPPED HELICOPTER

## HOVER CEILING IN GROUND EFFECT (2900 RPM)

3 1/2 foot skid height

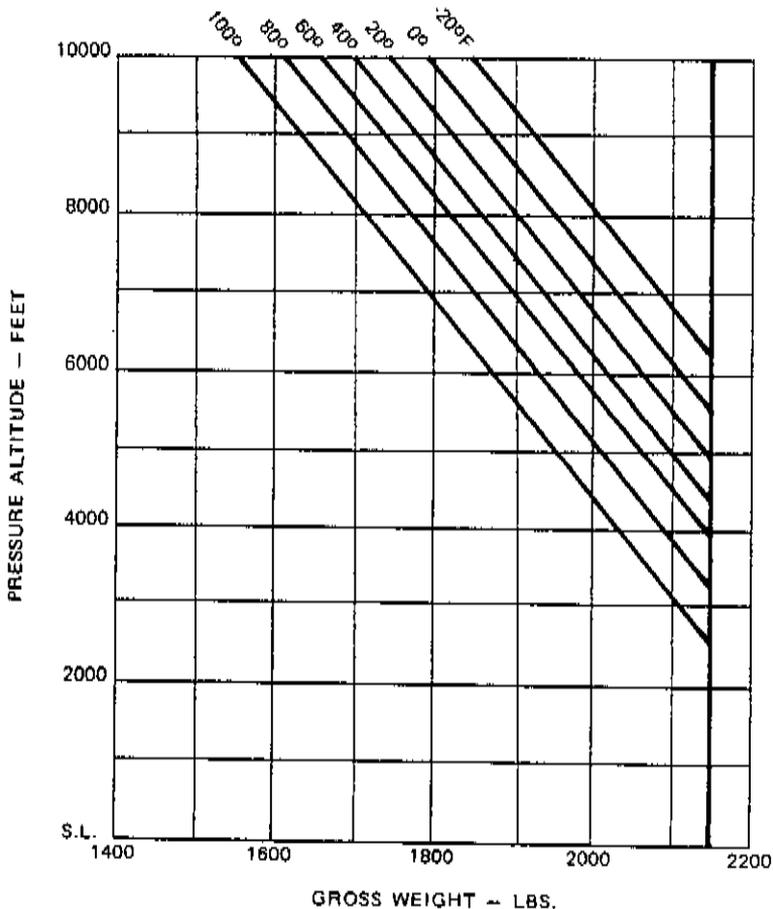


FAA Approval: June 6, 1969  
Revised 8/1/74

REPORT 28 AC 009

**HEIGHT-VELOCITY DIAGRAM**

For Operation at 7,000 Ft. Density Altitude  
(Tests conducted on prepared surfaces)

**AVOID OPERATION IN SHADED AREAS**

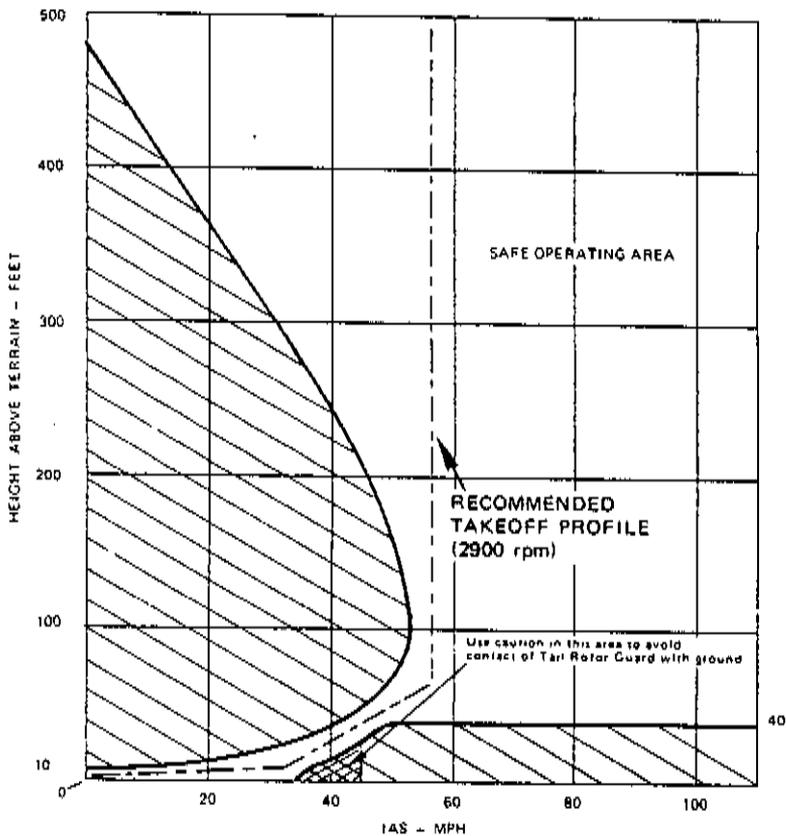


Weight applicability of H-V Diagram is based on hover capability at 3.5 feet skid height. (Reference FM 5-3.)

Figure 4b

# ENSTROM F-28A FLOAT EQUIPPED HELICOPTER HEIGHT-VELOCITY DIAGRAM

For Operation at Sea Level  
(Tests conducted on prepared surfaces and water.)

AVOID OPERATION IN SHADED AREAS

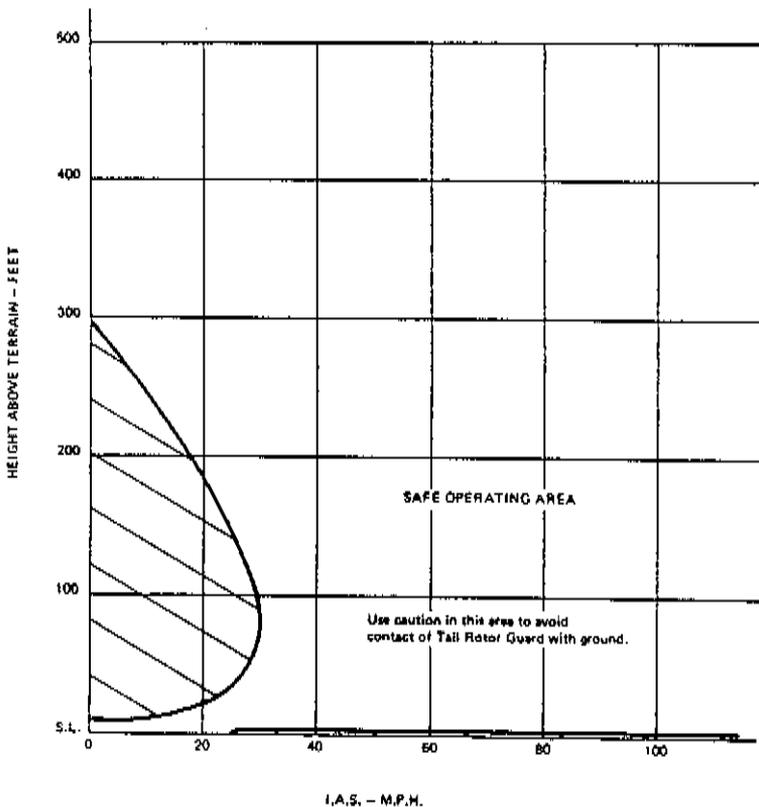

## ENSTROM MODEL F-28A

### EXTERNAL LITTER SUPPLEMENT NO. 3

#### DESCRIPTION

The Enstrom External Litter Installation (Drawing No. 28-22115), when installed, will permit operation of the helicopter with a patient carried externally in a Stokes type litter. Litters may be installed on the right or both sides of the aircraft if gross weight and center of gravity limitations are observed.

#### 1. OPERATING LIMITATIONS

This helicopter meets the structural and design requirements of CAR Part 6 providing the data contained in this supplement are included in and imposed by the Rotorcraft Flight Manual.

#### WEIGHT LIMITATIONS

Gross weight shall not exceed the maximum allowable for the basic helicopter.

#### AIRSPEED LIMITATIONS

Normal airspeed limitations are to be observed with litter(s) installed.

#### PLACARDS

"With Litter(s) Installed:"

Solo from left seat only.

Carry single litter load on right side.

#### CENTER OF GRAVITY

The C. G. of the external litter when installed is located at station 101.3. Total weight of the installation is 25.0 lbs.

## ENSTROM MODEL F-28A

### EXTERNAL MOUNTING OF AUXILIARY FUEL TANK SUPPLEMENT NO. 4

#### DESCRIPTION

The Enstrom external auxiliary fuel tank installation (Drawing No. 28-22500) when installed will permit additional 22 gallons of fuel capacity. This installation is for the right side mounting only. The described system is comprised of a chadwick tank with an integral fuel transfer pump, required mounting brackets, lines and electrical controls. Operation of a helicopter with this installation must be within the approved gross weight and C.G. limitations as described herein. This system can be used to supplement fuel capacity for helicopters equipped with 40-gal. or 30-gal. main fuel tanks. These systems are defined as Enstrom external auxiliary fuel tank installation Drawing No. 28-22500-1 to be used with 40-gal. capacity main tanks and Drawing No. 28-22500-2 for 30-gal. capacity main tanks. The two systems are identical except for operational placards and minor gross weight and C.G. variations as detailed in the following paragraphs.

## SECTION 2 – OPERATING LIMITATIONS

### FLIGHT OPERATING LIMITATION

This helicopter meets same basic F-28A limitations and design data requirements of CAR 6 providing the data contained in this supplement are included in and imposed by the Rotorcraft Flight Manual.

### WEIGHT LIMITATIONS

The gross weight shall not exceed the maximum allowable for the basic helicopter with the auxiliary fuel system installed.

### AIRSPEED LIMITATIONS

Normal airspeed limitations are to be observed with the external auxiliary tank installation.

### PILOT STATION LIMITATIONS

Solo from left seat only.

FAA Approval: April 3, 1974

## SECTION 3 – NORMAL PROCEDURES

### FUEL TRANSFER CONDITIONS FOR 40-GAL. CAPACITY MAIN TANKS

Enstrom drawing No. 28-22500-1 describes the 40-gal. external auxiliary fuel tank installation.

#### PLACARD

To be placed adjacent to control switch – Enstrom Part No. 28-22504.

“Transfer auxiliary fuel when quantity gauge reads 30 gals., 180 lbs., in flight only.”

The fuel level will increase from 30 gals. to 40 gals. in approximately 1.7 hours of flight.

### FUEL TRANSFER CONDITIONS FOR 30-GAL. CAPACITY MAIN TANKS

Enstrom Drawing No. 28-22500-2 describes the 30-gal. external auxiliary fuel tank installation.

#### PLACARD

To be placed adjacent to control switch – Enstrom Part No. 28-22505.

“Transfer auxiliary fuel when fuel quantity gauge reads one-half tank, in flight only.”

Fuel level will increase from one-half tank to approximately three-fourths tank in 1.7 hours of flight.

## SECTION 7 – WEIGHT & BALANCE

### CENTER OF GRAVITY

The C.G. of the external auxiliary fuel tank is located at station 101.3 and the total weight of the 28-22500-1 and 28-22500-2 installation is 40 lbs.







## WEIGHT AND BALANCE

### INFORMATION

All helicopters are designed for certain limit loads and balance conditions. Changes in equipment which affect the empty weight center of gravity must be recorded in the aircraft and engine log book. It is the responsibility of the helicopter pilot to ensure that the helicopter is loaded properly. The empty weight, empty weight C.G. and useful loads are noted on the weight-balance sheet included in this Manual for this particular helicopter.

NOTE: The C.G. range for the F-28A Helicopter is 92.0" to 98.0" from datum line at a maximum gross weight of 2150 lbs. Listed on page FM-3-5 is a typical loading condition of the F-28A Helicopter, both rearward C.G. and forward C.G. condition.

### WEIGHT AND BALANCE

The removal or addition of fuel or equipment results in changes to the center of gravity and weight of the aircraft, and the permissible useful load is affected accordingly. The effects of these changes must be investigated in all cases to eliminate possible adverse effects on the aircraft's flight characteristics. The horizontal reference weighing point is located 20 inches forward of the center bolt in rear skid attachment.

Maximum Gross Weight	2150 lbs.
Empty Weight (no accessories, fuel or Oil)	1450 lbs.
Useful Load	700 lbs.
Approved Forward C.G. Limit	Station 92
Approved Aft C.G. Limit	Station 98

### TOOLS AND EQUIPMENT

Tape Measure	Commercial
Scale (two)	1000 lbs. capacity
Scale - tail (one)	100 lbs. capacity
Level - bubble-type	Commercial
Work stand	As required


### DETAILED PROCEDURE FOR WEIGHING F-28A SERIES HELICOPTER

- Thoroughly clean helicopter.
- Helicopter will be weighed inside a closed building to prevent errors in scale readings due to wind. Helicopter will be placed in a level flight attitude.
- Check for proper installation of all accessory items. Check to determine if the scales that are being used have been calibrated recently, and check to see that the scales will zero out before weighing helicopter.

- d. The helicopter will be weighed without fuel, but the weight and balance record will reflect corrections to indicate the amount of unusable fuel required by the helicopter configuration. The helicopter may be weighed with full oil or without oil, but the weight and balance report should be corrected accordingly.
- e. Tare will be noted when helicopter is removed from the scales.

**NOTE:** Check oil level of main transmission and tail rotor transmission. Check to see that the main rotor blades are in uniform position, 120° apart.

- f. Close and secure both doors, left and right hand sides.
- g. Hoist or jack helicopter clear of ground.
- h. Position two main scales beneath the skids.
- i. Position a pipe nipple in the center of left and right hand scales at 20 inches forward of center bolt in rear skid attachment (Detail No. 1)

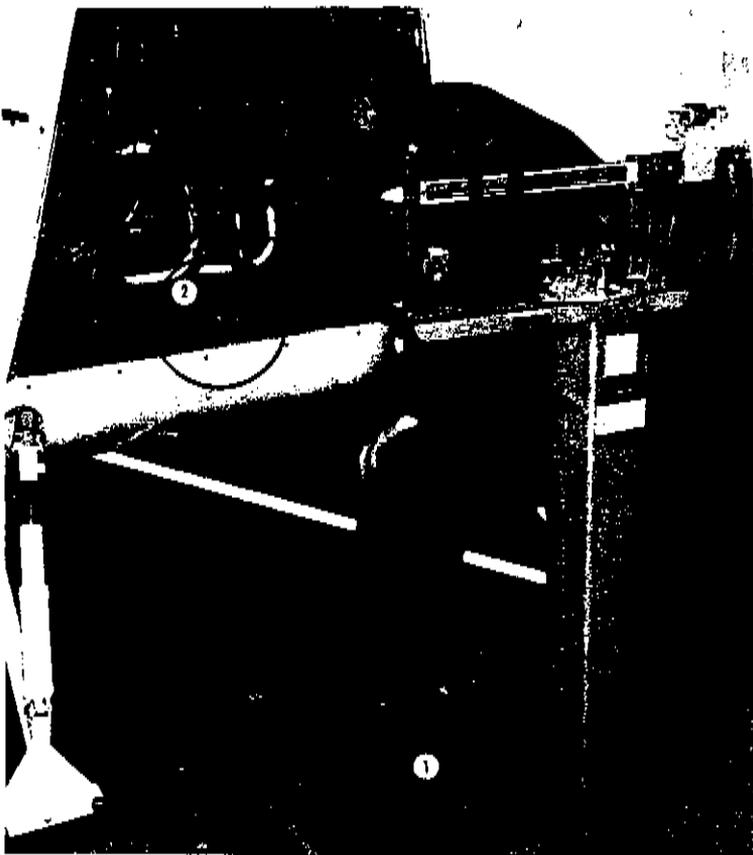

**NOTE:** Side panels must be removed for leveling. After leveling, temporarily install for weighing.

- j. Height of tail to be adjusted for level.
- k. Level fore and aft to be taken at lower pylon tube, left side, so identified. (Detail No. 2)
- l. Lateral level taken at lower forward pylon tube.



- m. Small scale will be located under tail rotor guard at the center line of the tail rotor output shaft, shown above.

**CAUTION:** Exercise care to maintain scale alignment during lowering operation of helicopter on scale. No part of skid should touch scale. If helicopter doesn't balance on pipe nipples, under skids as necessary to obtain balance, and measure from rear skid attachment center bolt to center of pipe nipple. Record measurement on weight sheet.

- n. Using jack, raise or lower tail as required to level the aircraft along the longitudinal axis, paying attention to the level on the longitudinal and lateral pylon tubes.

- o. Read and record weight from each of three scales.
- p. Calculate weight and center gravity on attached form, with weight data. Empty weight will be "dry weight."
- q. All items added or subtracted will be listed on the attached form with weight, arm, and moment.

**CAUTION:** Weight and measurement readings are critical. Double check results.

- r. Remove helicopter from scales.

**CAUTION:** Do not remove curbing, jack, nipples, blocks, etc., from scales. These items constitute tare weight.

- s. Read and record tare weight from each of the three scales. An official weight and balance report is prepared in connection with each helicopter presented for airworthiness certification at the Enstrom Corporation. All these reports are marked "actual weight."
- t. This weight and balance report, and equipment list will be prepared and supplied with each helicopter.
- u. Use Form No. F-165 Basic Weight and Balance Report to give you a continuous history of weight changes throughout the life of your helicopter.

**NOTE:** Under normal operating conditions, ballasting is not necessary

## LOADING INFORMATION

**NOTE:** It is the responsibility of the helicopter pilot to insure that the helicopter is loaded properly. The empty weight, empty weight CG and useful load are noted on the weight and balance sheet included in this Manual for this helicopter.

CG Range: 92.0 to 98.0

Maximum Gross Weight: 2150 lbs.

TYPICAL LOADING

## Rearward C.G.


	<u>Weight</u>	<u>Arm</u>	<u>Moment</u>
Empty Weight (including undrainable engine oil, gear box oil and unusable fuel)	1450.0	100.8	146160.00
Engine Oil	15.0	96.0	1440.00
Fuel, 30 gal.	180.0	98.0	17640.00
Pilot	140.0	68.5	9590.00
	<u>1785.</u>	<u>97.9</u>	<u>174830.00</u>

## Forward C.G.

Empty Weight (including undrainable engine oil, gear box oil and unusable fuel)	1450.0	100.8	146160.00
Engine Oil	15.0	96.0	1440.00
Fuel, 29.2 gal.	175.0	98.0	17150.00
Pilot and Passengers	510.0	68.5	34935.00
	<u>2150.</u>	<u>92.9</u>	<u>199685.00</u>



# WEIGHT AND BALANCE REPORT

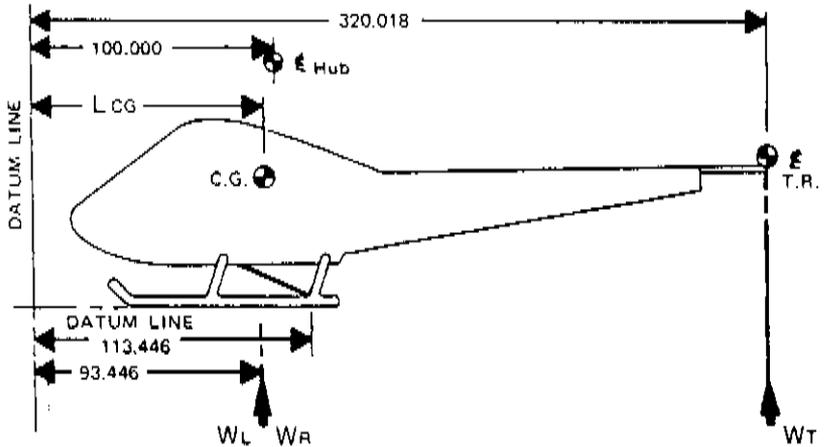

Model \_\_\_\_\_ Serial No. \_\_\_\_\_ Registration No. \_\_\_\_\_

FWD. c/g limit 92.0" AFT. c/g limit 98.0"

Weigh point	Scale—lbs.	Tare	Net wt.	Arm	Moment × 1000
Left gear			(W <sub>L</sub> )		
Right gear			(W <sub>R</sub> )		
Tail			(W <sub>T</sub> )		
Total				X	

$$L\ C\ G = \frac{W_T(320.018) + (W_L + W_R)(93.446)}{W_T + W_L + W_R}$$

Date \_\_\_\_\_ Weighed by \_\_\_\_\_











## ENSTROM F-28A EQUIPMENT LIST

Serial No. \_\_\_\_\_

FAA Approved Registration No. \_\_\_\_\_ Date \_\_\_\_\_

Check Date		No.	Item	Manufacturer and Part No.	Wt.	Arm
On	Off					
<b>INSTRUMENTS - REQUIRED</b>						
			Altimeter	5932-R United	1.2	36
			Airspeed	22-697-013 Weston	.5	36
			Tachometer	Consolidated 65-29	1.3	36
			Manifold - Fuel Pressure	6080-R United	1.5	36
			Instrument Cluster	Garwin 22-169	2.0	36
			Oil Temperature			
			Oil Pressure			
			Gear Box Temperature			
			Cylinder Temperature			
			Fuel Quantity			
			Ammeter			
			Compass		1.0	40
			OAT Gauge		0.5	55
<b>OPTIONAL EQUIPMENT</b>						
		501	Night Lighting Equip. (incl. 2 beacons, 4 running lights, landing and panel lights, 12 post lights).		7.0	104
		502	Map Light		0.5	85
		503	8-Day Clock		0.5	32
		504	Hour Meter		.75	36
		505	Post Lighting		1.0	35
		506	Defroster		6.0	37
		507	"Locator" Searchlight		24.0	76
		508	Door Locks with upper and lower latches		2.0	77
		509	Center Radio Console		2.5	32
		510	Cargo Hook (mounting bracket 9.5 lbs.)		15.0	96
		511	Telephone		27.0	108
		512				
		513	Snowshoes		14.0	120
		514	Cabin Heater		4.1	36
		515	Baggage Compartment		10.0	135
		516	Flotation Gear		66.0	96
		517	Dual Controls		12.0	50
		518	Floor Carpet, Interior Trim and Headliner		3.5	64
		519	Fed. 12V Twin Speaker - Siren		13.0	120
		520	Litter Kit - Single		24.0	100
		521	Litter Kit - Double		48.0	100
		522	Shoulder Harness with Reel - Single		4.5	82
		523	Shoulder Harness with Reel - Double		9.0	82
		524	First Aid Kit		5.2	82
		525	Ashtrays and Lighter		1.0	42
		526	Fire Extinguisher (Ansul)		5.7	75
		527	APU Unit (including cord)		4.5	73
		528	Narco Com IIA (Helicopter Transceiver)		3.5	32
		529	Narco Nav II		2.5	32
		530	Narco Digital ADF-PDF 35		6.5	32
		531	Narco DME 70		10.0	32
		532	Bonzer Radar Altimeter TRN-71		4.5	32
		533	Gyro Horizon AIM 500 DCF (14)		3.4	32
		534	Warning Light Panel indication:		3.0	32
			1. Starting solenoid stuck	2. Alternator not charging		
			3. Low fuel			

FAA Approval: May 21, 1968

Form No. F-157

Revised 8/1/74















## OPERATIONAL INSTRUCTIONS

### INTRODUCTION

The operating data and information contained herein is not intended to provide flight instructions, but to present a verbal picture of the helicopter handling qualities and control application through the various phases of the flight regime. Also discussed are flight characteristics which are common to most helicopters, and the special features pertinent to the Model F-28A Helicopter.

**Taxiing.** Taxiing, as literally interpreted, is not possible as the helicopter is equipped with skid-type landing gear. Movement of the helicopter from one ground position to another can be accomplished by ground personnel, when the rotors are not turning, with the use of quickly installed ground handling wheels or by the pilot flying the helicopter from one location to another at an altitude in close proximity to the ground surface.

**Takeoff - Types of Takeoff.** The known factors which must be considered prior to takeoff include gross weight, temperature, density altitude, and the area from which operations are to be conducted. With this knowledge and the ability of the Model F-28A to operate from either prepared or unprepared areas and surfaces, the type of takeoff can be easily determined.

**Normal Takeoff To Hover.** A normal liftoff to a hovering altitude within ground effect is the most common type of takeoff and should be used whenever possible. Normal liftoff can be accomplished at moderate altitudes and at average operating gross weights. In this type of takeoff, the safety factor is high because the helicopter is lifted from the ground vertically to a height of 4 to 5 feet where the flight controls and engine may be checked for normal operation before starting a forward speed climb. A normal takeoff is made in the following manner:

- a. Increase throttle to 2900 RPM, with the collective pitch **FULL DOWN**.
- b. Place cyclic control in the **NEUTRAL** position or to a position which places rotor plane parallel to horizon if helicopter is sitting on a slope.
- c. Increase collective pitch control slowly and smoothly until a hovering altitude of 3 to 5 feet is obtained, applying anti-torque pedal to maintain heading as collective pitch is increased.
- d. As the helicopter breaks ground, minor corrections of the cyclic control may be required to insure vertical ascent, and directional heading maintained by the use of the appropriate anti-torque control pedal.

**Normal Takeoff From Hover.** Hover briefly to determine and insure that the engine and flight controls are operating properly. From a

normal hover altitude of 3 to 5 feet, apply forward cyclic stick to accelerate smoothly into effective translational lift, maintain hovering altitude with an application of collective pitch until translational lift has been obtained and the ascent has begun. Then slowly lower nose of helicopter to an altitude that will produce an increase of airspeed to best climb speed. Adjust controls and power as required to establish the desired rate of climb.

**Maximum Power Takeoff.** Hover helicopter 3 to 5 feet altitude - 2900 RPM. Apply forward cyclic smoothly. As forward motion increases, apply collective and throttle until full manifold pressure is attained (throttle full open 2900 RPM). Do not increase collective pitch beyond this point (overpitching) as this will cause engine and rotor RPM to decrease. Maintain 3 to 5 feet altitude by use of cyclic control. As translational lift speed is reached (15 - 20 MPH), apply aft cyclic to seek climb angle that will allow helicopter to climb and accelerate to 55 mph (best rate of climb speed). Maintain heading during takeoff by coordinated use of directional control pedals and cyclic.

**Maximum Power Takeoff From Confined Areas.** Conditions may occur in which the helicopter must be operated from confined areas in which takeoff distances (from hover to reach 55 mph) are not sufficient to clear obstacles that may be in the flight path (trees, buildings, wires, etc.). In order to clear such obstacles safely, the climb portion of the takeoff must utilize the best angle of climb airspeed (30 mph safe side of height velocity curve). This angle of climb will substantially shorten the distance required to clear obstacles. To accomplish this type of takeoff, hover helicopter at 3 to 5 feet altitude and 2900 RPM. Apply forward cyclic smoothly. As helicopter begins to accelerate forward, apply collective and throttle until full manifold pressure is obtained (throttle full open, 2900 RPM engine). Do not increase collective beyond this point (overpitching) as this will cause engine and rotor RPM to decrease. Maintain 3 to 5 feet altitude by use of cyclic control. As translational speed is reached (15 - 20 mph) apply aft cyclic to seek climb angle that will maintain 30 - 35 mph (refer to height-velocity diagram in flight manual). After clearing all obstacles at this airspeed, apply forward cyclic and readjust collective and throttle as desired for further flight.

**NOTE:** If RPM is lost due to overpitching, it may be regained by maintaining full throttle, lowering collective slightly and applying some aft cyclic. It is imperative that the helicopter has accelerated a little beyond translational speed in order to accomplish this maneuver. Therefore, good judgment must be used to determine the rate at which the helicopter is accelerated from hover to translational speed and to determine if sufficient distance is available to clear obstacles under the existing density altitude conditions.

**Crosswind Takeoff.** In the event a crosswind takeoff is required, normal takeoff procedures are to be followed. However, as the

helicopter leaves the ground, there will be definite tendency to drift downwind at a rate proportionate to the wind velocity. This tendency can be corrected by moving and holding the cyclic stick sufficiently in the direction of the wind to prevent downwind draft. During cross-wind takeoff, it is advisable to keep open areas to windward side of flight path to facilitate emergency landing if it should be necessary.

### **NORMAL APPROACH FOR LANDING**

The object of a normal, prior to touchdown approach is to fly the helicopter to a hovering attitude over the selected spot of the intended landing area. To accomplish this objective, the cruise airspeed is decreased gradually to 55 MPH and engine speed is maintained at 2900 RPM. Control rate of descent with collective and throttle (manifold pressure); airspeed with cyclic control. As the selected landing area is approached, the airspeed and rate of descent are decreased until a zero ground speed hovering attitude is attained at approximately 3 to 5 feet altitude.

### **STEEP APPROACH**

Steep approach procedure requires a precision power control approach, and is used to clear obstacles in the flight path when accomplishing a landing in a confined area. The airspeed in a steep approach should be 30 to 35 MPH (safe side of H/V curve) and the rate of descent should be as low as possible for the desired angle of descent. Since a relatively high amount of power will be required to control the rate of descent, a minimum amount of additional power will be required to accomplish a hover. The aiming point to spot of intended hover in ground effect should be as near as possible after clearing final obstacles. This will allow an over-run to get helicopter stopped in case power settling should occur during slowdown from 30 MPH down to 0 airspeed. During descent, the airspeed is controlled by appropriate cyclic stick application and the rate of descent is controlled by proper application of collective pitch and throttle. In the final stages of approach, the collective pitch is increased gradually as the cyclic stick is adjusted to reduce the airspeed from 30 to 35 MPH to 0 groundspeed. This should be accomplished in a way which will reduce the rate of descent and groundspeed to zero the moment the hovering altitude is reached.

### **LANDING--LANDING SITE EVALUATION**

The versatility of the helicopter permits safe operation from unfamiliar and unprepared sites, such as open fields, mountain knolls and ridges, beaches, snow, and iced areas. Any selected landing site in the aforementioned areas must be properly evaluated and the pilot must use proper techniques to effect landings and take-offs from these sites. Although the helicopter is designed for and is capable of operation from restricted areas, the final analysis of the situation on the decision to land must be determined by the best professional judgement of the

pilot. Prior to attempting operation of the helicopter from unprepared areas, the pilot must consider certain basic factors and evaluate one against the other to determine what undesirable factors will be present in the contemplated operations. The condition of the selected landing area can be evaluated by a low speed pass into the wind over the intended landing site. Generally, the landing site should be near level, and depending on existing density, altitude and gross weight conditions, should meet the obstacle clearance requirements set forth in this Manual. The pilot must also consider personal proficiency, wind and terrain roughness when evaluating the suitability of the landing area.

### **WIND DIRECTION AND VELOCITY**

The effects of wind on take-off and landings are important factors and should be considered in the operation of the helicopter; however, in planning critical helicopter operations, the effects of winds can be relied upon to assist in accomplishing landings and take-offs from unobstructed areas. If the helicopter were riding a gust of wind on the final approach and the gust should decrease as the helicopter was approaching a hover, the helicopter would probably rapidly 'settle' if the wind factor was planned on to execute the landing. This condition will also hold true during the initial phase of take-off. If an operation is dependent on wind conditions, all other conditions being marginal, the helicopter gross weight should be reduced. When a landing area is determined to be marginal, the pilot, exercising good judgement, should select another site. Another effect of wind that must be considered is the 'lee' effect of the wind over hills, ridges, and obstacles. The downdrafts resulting from these conditions particularly affect the initial phase of take-off or final phase of landing.

### **NORMAL LANDING**

After completion of the normal approach to a hover altitude, maintain engine RPM and decrease collective pitch sufficiently to affect a constant, smooth rate of descent until touchdown. During final descent, make necessary corrections with directional pedals and cyclic control to maintain a level attitude and constant heading to minimize movement on ground contact. After ground contact, continue to decrease collective pitch smoothly and steadily until the entire weight of the helicopter is ground supported and then decrease collective pitch to minimum.

### **CROSSWIND LANDING**

Crosswind landings generally can be avoided in helicopter operations. Occasionally, when operating from unprepared areas, such as plowed or furrowed fields, ridges and upslope or downslope surfaces, necessity may require that crosswind landings be performed. When conditions demand and terrain features dictate, a crosswind landing is also utilized to preclude the necessity of landing on a high, tilting angle or a dangerous tail low attitude. Prior to accomplishing the crosswind

landing, the pilot should evaluate the climatic conditions, including wind velocity and the terrain, and then proceed as follows: Engine RPM maximum, approach landing spot from crosswind direction if possible, and hover. Hold cyclic control into direction of wind to prevent side drift, and reduce collective pitch and descend as in normal landing.

### **FLIGHT CHARACTERISTICS - HANDLING AND STABILITY**

The flight characteristics of the helicopter in general are similar to other single rotor helicopters. The particularly noticeable difference is the handling ease and additional stability that is evident during take-off, hovering, and all modes of flight. To obtain or increase helicopter forward speed, simultaneously apply forward control stick and increase main rotor pitch, and maintain power through constant flight condition. Altitude is maintained throughout the entire range of forward and rearward flight speeds by fore and aft movement of the cyclic control stick in coordination with collective pitch application. Directional heading is controlled by the application of lateral cyclic control and appropriate directional control pedal. Blade stall can only occur during flight and is caused by high angle of attack on the retreating blade and occurs at the outboard section of the blade area. This condition can not be encountered when the helicopter is operated within the specified operating limits as stated in the Flight Manual. Blade stall is the result of numerous contributing factors such as gross weight, low rotor RPM, airspeed acceleration, and altitude. The condition is most likely to occur at higher airspeeds and low operating RPM; it also follows that the condition will occur sooner with high values of altitude, gross weight, and angle of bank.

### **MANEUVERING FLIGHT**

Movement and response of the flight controls while conducting flight maneuvers is normal at all times when the helicopter is operating within the limitations set forth in the Flight Manual. Throughout the entire realm of flight, it will definitely be noted that minimum effort is required by the pilot for control of movement, and by use of trim system, a near zero control force effect effort is required, regardless of the gross weight or CG location.

### **HOVERING FLIGHT**

The hovering capabilities of the Model F-28A Helicopter for both in and out of ground effect hovering will allow flight operations to be excellent.

It should be remembered, however, that the performance of all helicopters is affected by numerous factors such as climatic conditions, altitude, temperature, and gross weight. It is a known fact that 'in ground effect' hovering performance is better than 'out of ground effect' hovering performance for reason of the helicopter being in part supported by the cushion of air being provided by the rotor downwash when the helicopter is in close proximity to the ground. Additional performance will also be realized when operating at low temperatures, which is the equivalent of atmospheric density, and wind, which represents airspeed. Either of these conditions or a combination of both increases performance since low temperatures allow the engine and rotor to provide more lift and wind reduces the power required.

## LEVEL FLIGHT CHARACTERISTICS

The level flight characteristics of the helicopter are normal throughout the operating limits range. All control movements produce immediate response and provide positive result.

## STUDENT TRAINING

Autorotation practice should be carried out over terrain suitable for full autorotational landing in case of inadvertent engine stoppage. Sudden power cuts to idle position are not recommended since the fuel injector is quite sensitive to improper adjustment of idle mixture, idle rpm and sudden momentary leaning of mixture caused by sudden power reduction.

## BLADE TAPE

Polyurethane leading edge tape can be installed on the main rotor blades. If the tape is installed, it should be inspected before each flight for holes, blisters, bubbles, separation, and security of attachment. If any defects are noted, the tape must be removed or replaced before the next flight. If the helicopter is operated in the rain, the tape life may be shortened considerably. Separation of part or all of the blade tape can cause an extremely rough rotor system. In this event, the helicopter should be landed as soon as practical and the rotor system, blades, and blade tape inspected before further flight.

## LOSS OF TAIL ROTOR EFFECTIVENESS

Loss of tail rotor effectiveness (LTE) is a phenomenon which can occur in any single main rotor/anti-torque tail rotor helicopter. Although the F-28A has a very effective tail rotor and does not exhibit any tendencies for LTE, the pilot should be aware that the potential for LTE, however small, does exist. As such, pilots should be aware of the causes and recovery techniques.

There are a number of factors which reduce the effectiveness of the tail rotor or increase the thrust required from the tail rotor. These factors include high power settings, low airspeeds, left crosswinds or tailwinds, and right, yawing turns. Under exactly the right conditions, these factors can combine to make the tail rotor virtually ineffective. This LTE can be recognized by an uncommanded right yaw which can not be stopped using the tail rotor pedals alone. Recovery from LTE can be accomplished by increasing forward speed, lowering the collective if altitude permits, and applying left pedal. The longer corrective actions are delayed, the more difficult it will be to recover from LTE.





## DAY-TO-DAY CARE OF YOUR F-28A

If you wish to obtain maximum performance and dependability from your F-28A Helicopter, certain inspection and maintenance requirements must be followed. It is always wise to follow a planned schedule of lubrication and maintenance based on the climatic and flying conditions encountered in your locality. Keep in touch with your Enstrom dealer and take advantage of his knowledge and experience. Your dealer is ready and willing to assist you and to keep you abreast of all changes, whether it be maintenance or periodic servicing of the helicopter.

### GROUND HANDLING

To facilitate moving the helicopter on the ground, insert the slotted handle facing forward. While applying a constant pressure to handle, release pin. Pull up and aft with a lifting motion until the holes line up. Insert the locking pin.

- CAUTION:**
1. Keep your feet from under the skids.
  2. Stay on outside of skid, do not straddle.

### MOORING YOUR F-28A

Although it is not generally necessary to tie down the helicopter, a nylon rope can be attached to the landing gear cross tube at the oleo attach points. One blade should be placed parallel to tail cone and tied to tail cone.

### TRANSPORTING F-28A

If transporting helicopter on trailer or truck, skids may be secured to bed of trailer allowing oleo's to function.

- a. Remove three main rotor blades and store in blade box.
- b. Secure tail rotor.
- c. Disconnect battery.

### STORAGE

The metal-fiberglass construction of your F-28A makes outside storage practical, although inside storage will increase its life just as inside storage increases the life of your car. If your F-28A must remain inactive for a time, cleanliness is probably the most important consideration. It is suggested that a canvas or nylon cover be placed over the rotor head. If storage is for an extended period, see your Lycoming Manual for preservation information.

### HOISTING

To lift the entire helicopter, the use of a nylon sling of approximately 3,000 lbs. is required. The nylon sling is placed around each grip assembly.

## JACKING

It is possible to jack up the helicopter inboard of upper oleo attach points on forward and aft cross tubes.

**CAUTION:** Support the tail cone at extreme end.

## EXTERIOR PAINT

The finish of your helicopter should be kept clean. It requires no special care. When washed, however, water should not be sprayed directly into any bearings. Any good grade of car wax will help to maintain the condition of the factory finish. It is very important that the main rotor blades be kept clean and free of dirt. After all, the blades are an airfoil, and to get maximum lift, they must be clean.

## WINDOWS AND DOORS

The windows and doors are made from a fine grade of acrylic plastic. These surfaces can be scratched if dirt, bugs or other foreign material are not removed promptly. If the windshield is excessively dirty, a water and mild soap solution will help lift the dirt.

**CAUTION:** Never take a rag to wipe dirt from the glass areas on your helicopter. There are many good products made especially for the cleaning of acrylic plastic surfaces.

## UPHOLSTERY AND CARPETS

No special care is required to keep the interior of your helicopter clean. A good stiff broom will help remove the imbedded dirt; vacuum the interior whenever possible. Any good upholstery cleaner can be used on the carpets and seats, but a word of caution when cleaning the seat belts. They are nylon, and certain cleaning agents will destroy the material used in their construction.

## LANDING GEAR SHOCK STRUTS

The oleo struts are of the air-oil type and require little maintenance. It is suggested that the oleo be wiped off frequently to keep the abrasive action of dirt and oil to a minimum.

## AIR CLEANER OR FILTER

The air cleaner is an important part of your engine's induction system. If it becomes dirty or clogged, your engine will use more fuel and will not produce maximum power. Excessively dirty filters will allow particles of dirt to be sucked into the cylinders, causing major damage. If your helicopter is operated in any dusty and high grass areas, check the air filter more frequently.

## LIGHTS

Check the electrical system of the helicopter daily and always before night flying is planned. Keep the light lens clean for maximum brilliance.

## BATTERY

The battery will normally require only routine maintenance. However, if you should operate in a warm climate, an occasional check for fluid level is recommended. Keep the battery terminals and battery compartment free of corrosion.

## DAMPERS - MAIN ROTOR

To check for lead-lag operation, move each blade fore and aft by gripping blade at tip. A resistance indicates damper operation.

## TRANSMISSION - MAIN

The transmission requires no special attention other than checking the sight gauge on the rear of the transmission on the right-hand side.

## TRANSMISSION - TAIL ROTOR

The transmission requires no special attention other than checking the oil level by sight gauge.

## LUBRICATION

Lubrication information is included in the Maintenance Manual. It is imperative that the correct lubricants be used and trained personnel do this job properly. Each item should be serviced at prescribed intervals. At the same time, all other items requiring more frequent service should receive attention. The intervals stated on the lubrication diagram should be considered maximum for average service. If your helicopter is operated under abnormal conditions, check these items more frequently.

## EXCESSIVE GREASE

After a helicopter is returned from a routine inspection, the rotor head, tail rotor, and the tail rotor drive shaft will throw out grease. To keep the helicopter finish bright, remove this grease as soon as possible to prevent its sticky surface from collecting dirt.

## MAIN ROTOR AND TAIL ROTOR BLADES

Preflight inspection of the main and tail rotor blades for nicks, and an occasional wiping with a clean cloth to remove bugs and stains, coupled with regular lubrication of the hubs, will assure long, troublefree service. Never use an alkaline cleaner on the rotors; remove grease and dirt with carbon tetrachloride or Stoddard Solvent.

If the helicopter is equipped with polyurethane blade tape, the tape should be inspected before each flight. Look for holes, bubbles, blisters, or separation of the tape. If any defects are found, the tape must be removed or replaced before further flight. The tape should be kept clean in the same manner as the rest of the blade, except it should be cleaned only with soap and water. Do not use solvent on or around the blade tape.

## FUEL

As you will note, the fuel tanks on your helicopter are placarded for quantity and octane of fuel to be used. The engine requires this type of fuel to provide the power designed into it. The use of other types of fuel will affect its smoothness of operation and power output. Be certain that the fuel contamination due to worn out and inoperative filtration system, dirty fuel hose nozzles, rain or any other foreign material does not enter your helicopter's fuel system.

## OIL

The engine manufacturer has recommended the (see Engine Operator's Manual) types of oil to be used in the different temperature ranges. These recommendations should be followed to aid in cold weather starting and proper hot weather lubrication of your helicopter engine. Care should be taken when adding oil that oil spouts are free of dirt and foreign material, oil can tops are clean before installing oil spout, and when removing oil filler cap, dirt does not enter the oil sump. When installing the engine oil fill cap, check it for security and cleanliness.

## COOLING SYSTEM

If unusually high oil temperature is encountered, remove oil cooler shroud and check for foreign matter.

## REQUIRED F.A.A. FORMS

Miscellaneous data, information, and licenses are a part of the aircraft file. The following is a check list for that file. In addition, a periodic check should be made of the latest Federal Aviation Agency Regulations to assure that all data requirements are met.

- A. To be carried in the helicopter at all times.
  - 1. Aircraft Airworthiness Certificate Form ACA 1362
  - 2. Aircraft Registration Certificate Form ACA 500A
  - 3. Aircraft Radio Station License
  - 4. Weight and Balance Report
  - 5. Aircraft Equipment List
  - 6. Flight Manual
  
- B. Since the regulations of other nations may require other documents and data, owners of exported aircraft should check with their own aviation officials to determine their individual requirements.

- C. Inspection Periods: Civil Air Regulations require that all aircraft have a periodic (annual) inspection as provided by the administration, and performed by a person designated by the administration. In addition, 100-hour inspections by an "appropriately rated mechanic" are required if the aircraft is flown for hire. The manufacturer recommends the 100-hour inspection for your helicopter. A copy of the sample inspection forms, including the 50, 100, periodic and lubrication guides are included in the Maintenance Manual.









